WB25H7****

Washing machine

User manual

Planet First 100% Recycled Paper

This manual is made with 100 % recycled paper.

Imagine the possibilities

Thank you for purchasing this Samsung product.

DC68-03469A-01

SAMSUNG

Untitled-6 1 2014-11-26 5:02:03

Content

Safety information 3

Icons and symbols used in this manual 3
Important safety instructions 5
Location requirements 6

Installation 7

What's included 7
Installation requirements 8
Step-by-step installation 9

Basic operations 20

Laundry guidelines 20
Detergent types and usage 23
When to add fabric softener 23
Handling the secure door 23
About a sanitizing wash 24
Getting started 25

Maintainence 29

Cleaning the exterior 29
Keeping the tub clean 29
Cleaning the water valve mesh filter 30
Filter 31

Troubleshooting 32

Check the table below for basic troubleshooting solutions 32
Information codes 34

Specifications 35

Specifications 35

Untitled-6 2 2014-11-26 5:02:03

Safety information

Throughout this manual, you'll see Warning and Caution symbols. These warnings, cautions, and the important safety instructions that follow do not cover all possible conditions and situations that may occur. The product you have purchased is designed for domestic use only. Using the product for business purposes qualifies as a product misuse.

In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility will be attributed to Samsung for malfunctions or damages resulting from such misuse. It's your responsibility to use common sense and caution when installing, maintaining, and operating your washing machine. Samsung is not liable for damages resulting from improper use.

After reading this manual, store it in a safe place for future reference.

Icons and symbols used in this manual

These warning signs are here to prevent injury to yourself and others.
Please follow them explicitly.

	WARNING: Hazards or unsafe practices that may result in **severe physical injury, death and/or property damage**.
	CAUTION: Hazards or unsafe practices that may result in **physical injury and/or property damage**.
	NOTE

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Untitled-6 3 2014-11-26 5:02:03

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

Untitled-6 4 2014-11-26 5:02:03

CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Important safety instructions

WARNING: For safety reasons, read through the following instructions before installing or using the washing machine.

Do not attempt to repair, disassemble, or modify your washing machine. For any repairs, contact your nearest Samsung service center.

Do not wash items contaminated with gasoline, kerosene, solvents, or any other flammable substances.

Do not install the washing machine in a location exposed to extreme temperatures, high-humidity levels, and/or the weather.

Do not let children or pets play in, on, or around the washing machine. Proper supervision is necessary at all times.

Do not use the washing machine if the washing machine or any parts of the washing machine are damaged.

Keep all packaging materials away from children.

Do not put your hands or any objects in or under the washing machine while the washing machine is operating.

Do not replace a damaged power cord or power plug yourself. Have Samsung or a qualified service technician replace a damaged power cord or power plug.

Before disposing of your washing machine, remove the lid.

Untitled-6 5 2014-11-26 5:02:03

Location requirements

To ensure safe and proper installation and use of your washing machine, follow these guidelines for selecting a location.

WARNING:

- Use caution when lifting or moving the washing machine.
- Do not install the washing machine in areas exposed to the weather.
- Do not install the washing machine in areas where the ambient temperature may drop below 32 °F (0 °C).
- Keep the washing machine away from electrical devices.
- Do not install the washing machine in a location where gas may leak.
- Do not install the washing machine near a heater or flammable material.

Select a level, well-constructed surface that does not have carpeting or flooring that may obstruct ventilation or contribute to vibrations.

Select a location where a grounded, 3-prong socket is easily accessible.

For the provided water hoses to reach the washing machine, make sure the water taps are within 120 cm (4 ft) of the back of the washing machine.

Untitled-6 6 2014-11-26 5:02:04

Installation

Follow these instructions carefully to ensure that the new washing machine works properly and to avoid physical injury.

What's included

Carefully unpack the washing machine, and make sure you've received all the parts shown below. If the washing machine was damaged during delivery, or if you do not have all the parts, contact a local Samsung customer service center or your Samsung retailer.

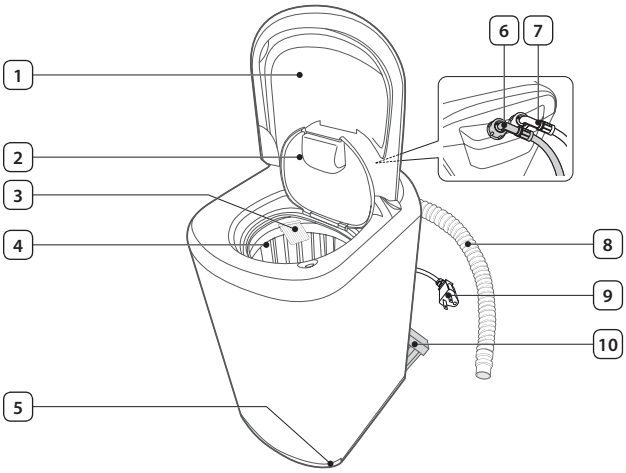

1	Door lid
2	Secure door lid
3	Filter
4	Tub
5	Levelling feet
6	Cold water supply hose
7	Hot water supply hose (applicable models only)
8	Drain hose
9	Power cord
10	Baffle board

This product can only be used with 230 V, and is not compatible with a power source of 110 V.

Accessories

The water supply hose and the drain hose (extension hose) can be purchased at a local Samsung service center.

Water supply hose (2)

Drain hose

Hose guide


Drain adaptor

Clamper


Baffle board


Leveling device

Screw


User manual

Inlet T adaptor

Untitled-6 7 2014-11-26 5:02:05

Installation requirements

Water Supply

- The washing machine fills up with a water pressure of 0.05 Mpa ~ 0.78 Mpa (0.5~8.0 kg•f/cm^2).
- A water pressure level of less than 0.05 MPa (0.5 kg•f/cm^2) may inhibit the water valve to close completely. Or it may take longer than normal to fill the washing machine, causing the washing machine to turn off. (The washing machine has a fill-time limit that is designed to prevent an overflow against a loose internal hose)
- For the provided water hoses to reach the washing machine, make sure the water taps are within 120 cm (4 ft) of the back of the washing machine.
- Before using for the first time, check all connections at the water valves and taps for any leaks.

To reduce a risk of water leaks:

- Make sure the water taps are easily accessible.
- Turn off the water taps when the washing machine is not in use.
- Check for any water leaks at the water inlet hose fittings.

Power supply

- To prevent a risk of fire, electrical shock, or physical injury, all wiring and grounding must be performed in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the owner's responsibility to accommodate adequate electrical power for this product.
- Do not use an extension cord.
- Use only the power cord that comes with your washing machine.
- When preparing for installation, ensure that your power supply offers:
  - A fuse or circuit breaker
  - An individual branch circuit serving only your washing machine
- The washing machine must be properly grounded. Against a malfunction or breakdown of the machine, a proper grounding will reduce the risk of electric shock by providing minimum resistance to the electric current.
- The washing machine comes with a power cord that has a three-prong grounding plug for use in a properly installed and grounded socket.
- Do not connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.
- Improper connection of the grounding conductor may cause electric shock. Check with a qualified electrician or service person if the washing machine is properly grounded.
- Do not modify the plug that comes with the washing machine. If it does not fit the socket, have a proper socket installed by a qualified electrician.

Untitled-6 8 2014-11-26 5:02:05

Grounding

For safety, the washing machine must be grounded.

- Ensure that the washing machine is properly grounded to prevent electric shock.

If the wall socket has a ground terminal

No additional grounding is required.

(*): Ground terminal

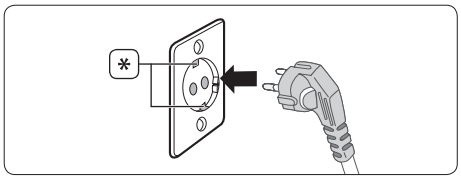

Step-by-step installation

Step 1 - Select a location

Location requirements:

- On a solid, even surface without carpeting or flooring.
- Allowing at least 10 cm (4 inches) of distance between the washing machine and the wall.
- Not exposed to direct sunlight or rain as moisture may damage the electrical insulation, causing an electrical shock hazard.
- Require adequate ventilation.
- Not exposed to temperatures below 32 °F or 0 °C.
- Away from a heat source.
- enough space so that the washing machine doesn't stand on its power cord.

Untitled-6 9 2014-11-26 5:02:05

Step 2 - Connect the water supply hose

1. Connect the L-shaped arm fitting for the cold water supply hose to the cold water supply intake at the upper rear side of the washing machine. Then tighten it by turning **part (A)** clockwise by hand.
   (*): applicable models only

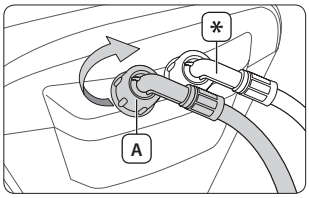

2. Remove the **adaptor (B)** from the other end of the **water supply hose (C)**.

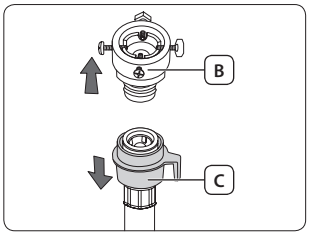

3. Loosen the four screws on the adaptor using a Philips screwdriver.

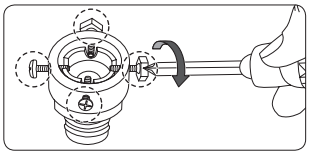

4. Connect the adaptor to the water tap by tightening all the screws firmly while lifting the adaptor upwards.

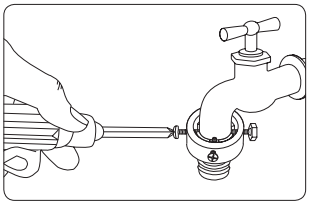

5. Connect the water supply hose to the adaptor. If you push **part (D)** into the adaptor, the hose automatically connects to the adaptor with a clicking sound.

   After connecting the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

   WARNING: Check if the water supply hose is not twisted or bent. If the hose is twisted or bent, water may leak, causing electric shock. If necessary, straighten the water supply hose by loosening the L-shaped arm fitting, rotating the hose, and retightening the L-shaped arm fitting.

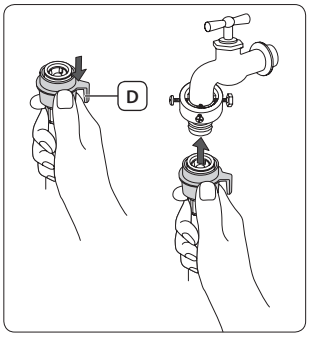

Untitled-6 10 2014-11-26 5:02:05

6. Open the water tap and ensure that no water leaks from the water supply intake, water tap or adaptor. If you encounter a water leak, repeat the steps above.

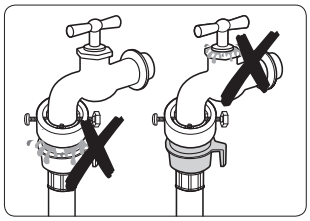

WARNING: In case of a water leak, stop using the washing machine. Otherwise, this may result in electric shock.

If the water tap is of the screw type, connect the water supply hose to the tap as shown.

Use the most conventional type of tap for the water supply. If the tap is square or too big, remove the space ring before inserting the adaptor into the tap.

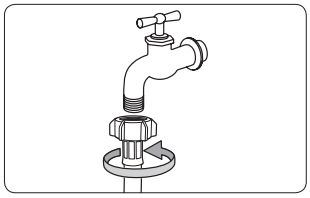

To connect the hot water supply hose (applicable models only)

1. Connect the red L-shaped arm fitting for the hot water supply hose to the hot water supply intake at the upper rear side of the washing machine. Then tighten it by manually turning **part (A)** clockwise.
2. Connect the other end of the hot water supply hose to the hot water tap in the same way as you connected the cold water supply hose.

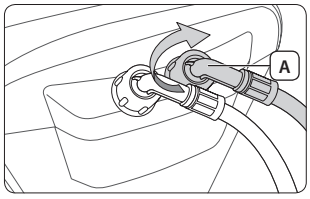

To use only cold water, use the Y-piece.

Untitled-6 11 2014-11-26 5:02:06

Combine with an existing washing machine by sharing one water tap

1. Disconnect the **water supply hose (A)** from the existing washing machine.

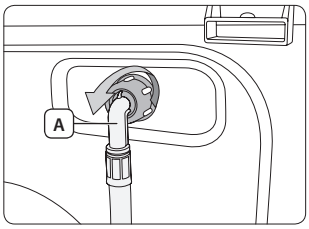

2. Connect the inlet **T adaptor (B)** to the **inlet hole (C)** of the existing washing machine.

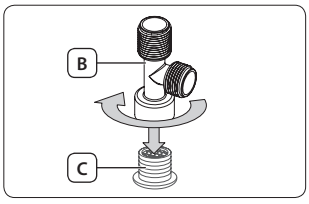

3. Connect the disconnected **water supply hose (A)** to the inlet **T adaptor (B)**.

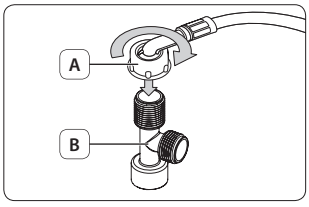

4. Connect the **water supply hose (D)** for the sanitizing washing machine to the inlet hole of the sanitizing washing machine.

   (*): applicable models only

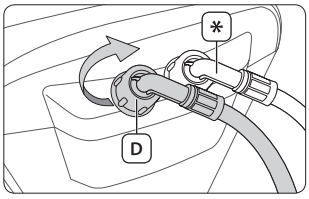

5. Connect the water supply hose to the inlet T adaptor as shown, and turn it clockwise to tighten. It fits with a clicking sound.

   (*): Rubber ring

   To avoid water leaks, make sure the rubber ring is secured around the T adaptor.

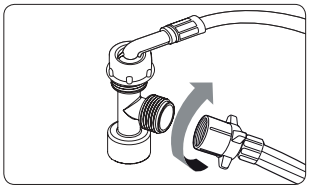

⚠ **CAUTION**: When finishing washing the laundry, close the water tap. Otherwise, this may cause the following:

- If the water tap is not closed or not connected properly, water may leak especially in winter.
- If the water tap is not closed, the supplied water may freeze inside the water hose.
- The water tap or hose could burst at a low temperature.

Untitled-6 12 2014-11-26 5:02:06

Step 3 - Connect the drain hose

1. Insert the **joint ring (A)** around the drain hose.

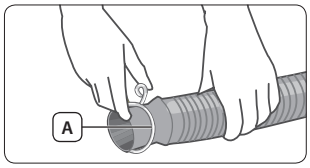

2. Connect one end of the drain hose into a drain hole, and join the other end of the drain hose into the drain outlet of the washing machine.

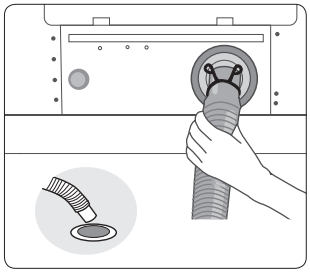

3. Tighten the drain hose by pushing the joint ring into the drain outlet. The length of the drain hose is adjustable so that it can be extended as required.

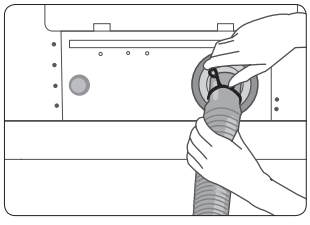

Pump draining system (applicable models only)

1. Connect the **drain hose (A)** to the case pump outlet pipe with the hose tilted at a 2 o'clock angle.

   The drain hose goes over the case pump outlet pipe. Make sure that you connect the drain hose so that less than 1/3 rd (10 mm) of the pipe remains exposed.

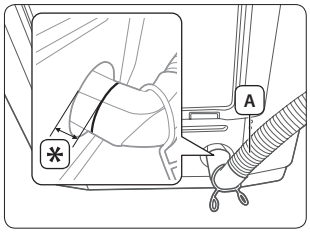

2. Clamp the drain hose using a **joint ring (B)**.

   Make sure the joint ring is clamped with its two prongs facing the washer.

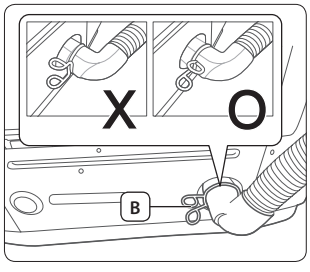

Untitled-6 13 2014-11-26 5:02:07

3. Insert the **clamper (C)** at the end of the sponge.
   Make sure the clamper covers one end of the sponge.
   Make sure the sponge is tightened. A loose sponge may cause noise while the washing machine is operating.

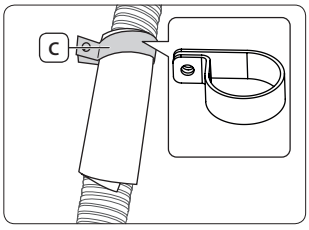

4. Insert the included screw through the screw hole in the clamper, then fix the screw to the hole on the rear right side of the frame. Tighten with a screwdriver.

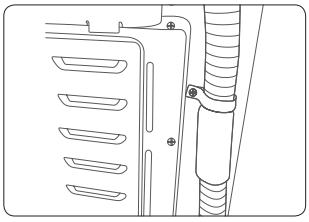

5. Make sure the drain hose is tightened as shown.

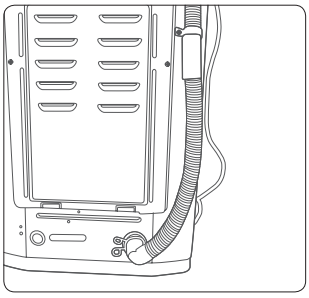

6. Place the drain hose **60 cm – 90 cm (*)** above the floor as shown. Make sure the end of the drain hose is not submerged by water.

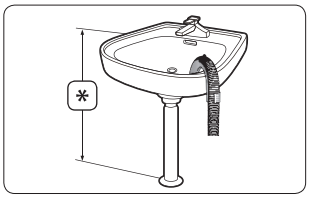

⚠ **CAUTION**: Once you have tightened the screw on the clamper, do not loosen it. Otherwise, water may leak while the washing machine operates.

Untitled-6 14 2014-11-26 5:02:07

To reverse the direction of the drain hose (applicable No Pump models only)

While pressing down the joint ring, disconnect the drain hose. Reverse the direction of the drain hose and repeat the steps above to connect again.

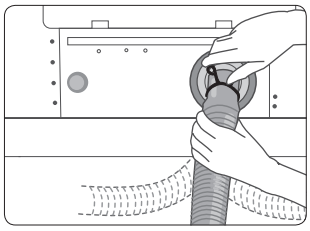

Considerations on the drain hose

- When extending the drain hose by connecting another hose, the total length cannot exceed **3 m (A)**.

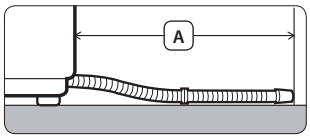

- For a proper draining, ensure that the drain hose ends at lower than the water level.

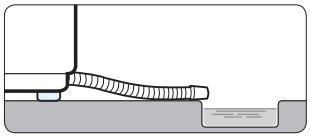

- Ensure that the drain hose spreads straight to the drain hole with no obstacles higher than **5 cm (B)** in the way.

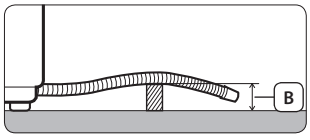

- Do not pass the drain hose through the bottom of the washing machine.

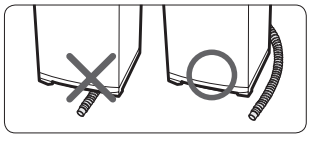

Untitled-6 15 2014-11-26 5:02:08

To share the drain hole with an existing washing machine (applicable No Pump models only)

To share one drain hole with an existing washing machine, use the drain T adaptor.

1. Connect the **drain hose (A)** of the sanitizing washing machine to one end of the **drain T adaptor (B)**.

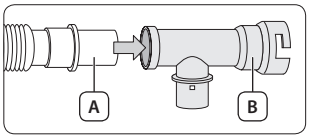

2. Insert the **drain hose (C)** of the existing washing machine in its **drain adaptor (D)**.

   For a fully automatic washing machine, please skip steps 2 and 3, and go directly to step 4.

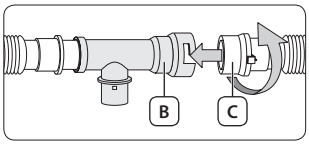

3. Use cable ties to tighten the joint if loose.

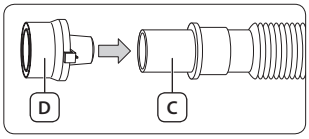

4. Connect the **drain hose (C)** of the existing washing machine to the **drain T adaptor (B)**.

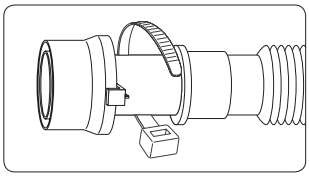

5. Insert the drain T adaptor to the **drain hole (E)** as shown.

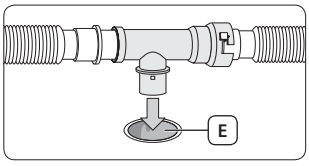

⚠ CAUTION

- If the drain T adaptor does not fit in the drain hole, water may leak around the drain hole.
- Ensure that the drain T adaptor covers the drain hole.

Untitled-6 16 2014-11-26 5:02:08

To share the drain hole with an existing washing machine (applicable Pump models only)

To share one drain hole with an existing washing machine, use the drain T adaptor.

1. Connect the **drain hose (A)** of the sanitizing washing machine to the **drain adaptor (B)** as shown.
2. Insert the **drain hose (C)** of the existing washing machine into the **drain adaptor (B)** as shown.

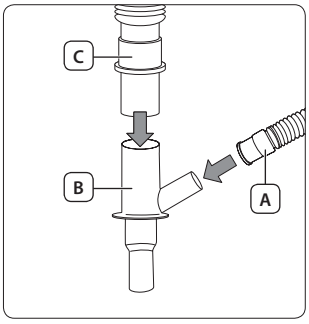

3. Insert the drain adaptor to the **drain hole (D)** as shown.

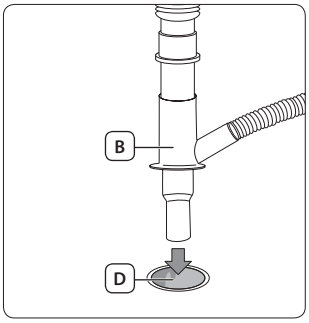

CAUTION

- If the drain adaptor does not fit in the drain hole, water may leak around the drain hole.
- Ensure that the drain adaptor covers the drain hole.

Untitled-6 17 2014-11-26 5:02:08

Step 4 - Level the washing machine

1. Choose a location with a minimum clearance of 4 in (10 cm) from the rear and side walls.
2. Attach the provided two levelling devices to the front and side, respectively. Then, check if the washing machine is level within tolerance.

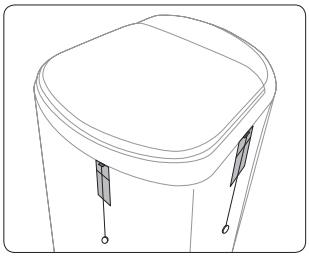

3. If the washing machine is not level, adjust the leveling feet.
4. To check if the washing machine is stable, press any two diagonal corners of the washer. It is shakes, adjust the leveling feet.

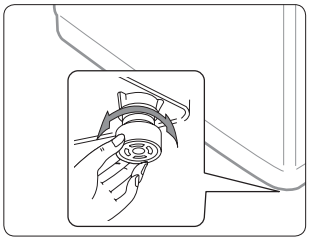

Untitled-6 18 2014-11-26 5:02:09

Step 5 – Insert the baffle board

1. Lay the washing machine down on its side.
- Do not lay the washing machine down on its front or back.
- While laying the washing machine down, be careful not to scratch the surface of the washing machine.

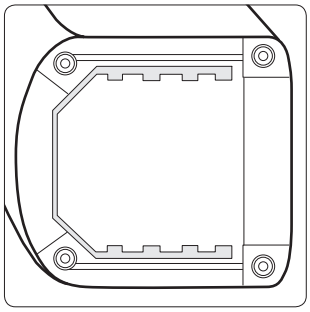

2. Insert the baffle board into the bottom of the washing machine along the guided line.
- The baffle board can reduce the working noise.
- Once the baffle board is installed, do not remove it unless necessary.

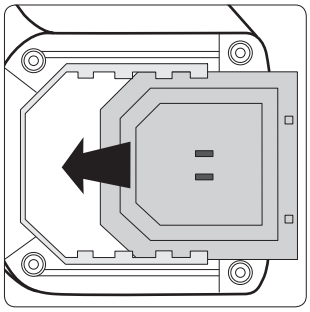

WARNING: Do not reach under the washing machine by hand or with any metal objects while the washing machine is operating. This may cause a physical injury or electric shock.

After installation is complete, run the Rinse+Spin cycle to make sure the washing machine works properly.

Untitled-6 19 2014-11-26 5:02:09

Basic operations

Laundry guidelines

Carefully read the following instructions to avoid machine problems or damage to clothing.

Check the Care label on clothing before washing.

- Do not overload the tub with laundry. Excessive laundry reduces the washing efficiency, and severely wears the laundry. Besides, the washing machine may cause creasing or wrinkling on the laundry.
- When washing big, bulky items or a few smaller items that don't fill the tub completely (for example, a rug, a pillow, stuffed toys, or one or two sweaters) add a few towels to improve the tumbling and spinning performance.
- Check if there are any items that might be discolored. Apply a liquid detergent to a white towel and a garment, and strongly rub the two items with each other. Check if anyone is affected by the other one.
- Special care is needed for scarves and imported clothes since they discolor easily. Check for stains or dirt. For stains, add some detergent to a cloth and rub the stains in one direction. Soil and dirt may rub against delicate garments, causing damage to the garments.
- For a badly soiled item, first dust it off and then wash it.
- Before washing the laundry, make sure that sleeves, collars, dress hems and pockets are pre-treated by brushing them with detergent. Wrinkle-processed clothing made of wool should be specially treated by tying them together (using thread) before washing. Remove the thread after the clothes have dried.
- Metal items on clothing may damage the tub and other laundry. Turn clothing with buttons and embroidered clothes inside out before washing them. Zip up all zippers. Otherwise, the spin basket may be damaged.
- Clothing with long strings may become entangled with other items. Make sure to fix the strings before starting a wash.
- Turn delicate items inside out before washing them.
- Wash black clothing and cotton towels separately. If these are washed together, the towels may become stained.
- Curtains, light garments, or blue jeans should not float. If they are floating, stop the washing machine by pressing the **START/PAUSE** button and press them down until they are soaked in the water. If the wash continues with floating clothing, it may damage both the laundry and the washing machine.

⚠ **CAUTION**

- Check all pockets before washing.
- Hair pins and coins may damage the washing machine.
- Check all pockets for metal items, and remove them before washing.

Untitled-6 20 2014-11-26 5:02:09

Do not wash

- Clothing that is easily disfigured even when simply soaking in water.
- Neckties, brassieres, jackets, suits and coats that are made mostly of rayon and other kind of blended fabrics that can be easily disfigured (e.g. shrinkage and discoloration).
- Wrinkle-processed, embossed, or resin processed products that are easily disfigured even when soaked in water.
- Easily discolored products made of cotton and wool, wrinkled silk, leather products, leather accessory, leather ornamented clothes and its accessories.
- Do not wash waterproof clothing (e.g. ski wear, diaper covers and mats/rugs). This may cause the laundry to be ejected or cause the washing machine to vibrate abnormally, which may result in personal injury or damage to the washer, the floor or the clothing. When the tub rotates, water may become trapped in the waterproof clothing or fabric and can collect in a corner, causing abnormal vibrations. In addition, the laundry rises and may be ejected and cause personal injury.

Laundry net

- Use only commercial laundry nets.
- Place delicate clothes in a laundry net.
- Cashmilon and garments that are large and lightweight (e.g. lace decorated clothing, lingerie, nylon stockings, synthetic fabrics, etc.) may rise to the top of the washing machine and damage clothing and the washing machine. Use a laundry net or wash these items separately.
- Place long stringed and lace decorated clothing, bed cover sheets, and woolen clothes into a laundry net before washing them.

Untitled-6 21 2014-11-26 5:02:09

Checklist

Sorting & pretreatment

1. Sort the laundry according to the types, colors and degree of soiling (heavily soiled, won't discolor, delicate clothing, etc.).
2. Keep the accessories of clothing in place and empty the pockets.
3. If any damage to the clothing, please fix it before washing.
4. Check if buttons are firmly in place.
5. Before washing, pre-treat any stubborn stains.
6. If any laundry is caught by the door lid, clothing may tear and cause water leakage. Please make sure no laundry is caught by the door before closing the door.

Before performing a sanitizing wash

Sort and wash the laundry by color.

- Do not wash laundry that may become discolored with a sanitizing wash.
- Do not use a sanitizing wash for delicate clothing such as woolen items and lingerie.

Do not use a boiling wash for these items

Cottons	easily discolored T-shirts. embroidered T-shirts knitted fibre
Linen Fibre	wrinkle resistant clothing with synthetic mixed fibre
Woolen or Silk items	only cold water wash allowed.
Synthetic Fibre	tops, shirts, stockings
Synthetic or Acetate fibre	do not use a sanitizing wash.

⚠
- Please use an AC wall socket with 230 V 13 A or more.
- Do not use an extension cord.
- Using other power voltage or current may result in fire, electric shock, or power failure.
- Do not use this product and other heating equipment at the same time.
- The temperature of a sanitizing wash cycle varies by the environment.

Untitled-6 22 2014-11-26 5:02:09

Detergent types and usage

- Adding more detergent doesn't increase performance. Rather, too much detergent generates too many bubbles, reducing the rinse effect and causing environmental pollution.
- Powder detergent residue may be left over in the cleaned laundry, causing bad odors. If using powder detergent, fully rinse the laundry.
- Bleach is strongly alkaline and can damage the laundry.
- Do not use a soap type of detergent whether it's a solid type or powder type. Using these types of detergent may cause the following:
  - A white residue of the detergent may remain on the cleaned laundry.
  - Some amount of the detergent may coagulate, causing bad odors on or discolor the laundry.
  - The tub can be badly contaminated with the detergent residue, which contaminates the laundry in turn.

The amount of fabric softener specific to wool or baby clothing differs depending on the manufacturer of the fabric softener. Make sure you are using the standard or recommended amount of softener by the manufacturer.

When to add fabric softener

- An alarm sounds for 20 seconds immediately before the last rinse cycle in order to remind users of adding fabric softener to the tub.
- For the **Rinse+Spin** cycle, fabric softner must be input in advance.

Handling the secure door

Open the secure door

Gently lift up the handle to open the door.

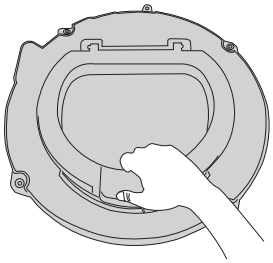

Close the secure door

Lower the door until it contacts the built-in magnet.

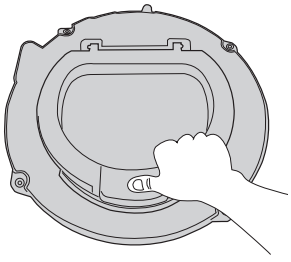

If the secure door is not firmly closed, the washing machine may emit noises during a spin cycle, or steam may overflow while sanitizing the laundry. Firmly close the secure door and lock it into place.

Untitled-6 23 2014-11-26 5:02:09

About a sanitizing wash

The laundry for sanitizing wash at home normally needs to be washed roughly in advance. This will help remove stains.

How can a sanitizing wash remove stains more effectively?

While the laundry is being sanitized, the laundry's fibres fold and naturally rub each other to facilitate the removal of stubborn stains. Also, the high temperature helps soften the material of the laundry, and enhances the performance of the detergent. Meanwhile, the stains on the surface of the laundry will be easily removed by the steam and bubbles that are generated by the high temperatures of the sanitizing wash cycle.

Sterilization

The sanitizing wash has a sterilization effect. Odors and most of the bacteria that cause skin allergies can be removed through a sanitizing wash. Keep your clothes fresh and clean.

Bleaching

The colors of clothes become brighter as stubborn stains are removed through a sanitizing wash.

Washing effect

The higher the water temperature, the better the washing effect.

The effects of a sanitizing wash are 60% better than a normal wash. Even with a half of the normal amount of detergent, the effects of sanitizing wash increase up to 20%

Sanitizing wash instructions

- Use caution during a sanitizing wash because the inner temperature is very high.
- To drain the water safely, do not select a high water level for a sanitizing wash. Specifically, do not put more than 1.5 kg (3 lb) of laundry into the tub. If more than 1.5 kg (3 lb) of laundry is loaded, the fibre of clothes may be damaged. (Underwear: 130 g; short pants: 50 g; socks: 50 g; normal towel: 150 g; bath towel: 300 g)
- Do not supply hot water for the cold water valve. Operate the washing machine only after the cold water valve is closed. For safety reasons, add cold water to cool down the hot water while draining.
- Time required to run the sanitizing wash cycle depends on the water temperature. The lower the water temperature is, the longer it takes to complete the cycle.
- The washing machine is designed for a sanitizing wash. Add only cold water to the hot water to cool it down when the cycle is complete.
- If only hot water is supplied, or the water hoses are connected reversely, the washing machine won't drain the water. If this is the case, an alarm will sound with an error message.
- The sanitizing wash cycle starts only when the door is closed.
- Once the cycle starts, the water level cannot be changed nor can hot water be added.

Untitled-6 24 2014-11-26 5:02:09

Control panel

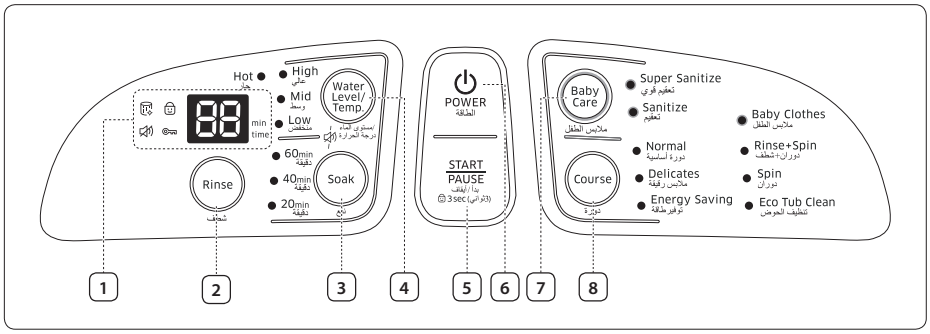

1. **Display**
   Displays the remaining washing time.
   Displays an error message if a problem occurs.
2. **Rinse**
   Press this button to perform a rinse-only cycle, or to change the number of rinse cycles.
   You can set up to 6 rinse cycles.
3. **Soak**
   Press this button to perform a soak wash.
   According to the selected cycle, the soak time is determined by the minute.
4. **Water Level**
   Press this button to select a water level from High, Mid, and Low.
5. **START/PAUSE**
   Press this button to start or stop an operation.
   To change the cycle while the washing machine is operating, press this button to stop the operation.
   Then, change the cycle, and press the button again.
6. **POWER**
   Press this button once to turn on the washing machine.
   Press it again to turn off the washing machine.

Untitled-6 25 2014-11-26 5:02:10

7. Baby Care

Use this course for items such as baby clothes and underwear that require additional rinse cycles for sanitary purposes without damaging the fabric.

Super Sanitize	For sterilizing and bleaching innerwear. The laundry is heated up to a sanitizing point and maintained for a pre-determined period of time, and then goes through 3 rinse cycles. (allowable load: 1.5 kg)
Sanitize	Sterilizes the laundry in power saving mode. (allowable load: 1.5 kg)
Baby Clothes	For newborn baby clothing (including diapers), infant clothing, and organic clothing that need extreme sanitariness without damaging the fabric. (allowable load: 1.5 kg)

8. Course

Select an appropriate course for the laundry type.

The tumbling pattern and the spinning speed depend on the selected course.

Normal	Default course.
Delicates	For washing delicate clothing such as lingerie and inner wear.
Energy Saving	Use this course to save energy.
Rinse+Spin	For laundry that only needs rinsing with or without a rinse-added fabric softener.
Spin	Select this course to perform a spinning-only cycle. You can set the spinning time between 1 and 9 minutes. The spinning time differs depending on the remaining washing time. Note that the remaining washing time includes the actual spinning time plus the draining time.
Eco Tub Clean	This course cleans and sanitizes the tub.

Untitled-6 26 2014-11-26 5:02:10

Before you start

1. Open the water tap.
   Check if the water supply hoses are correctly connected to the corresponding tap (cold/hot water).
2. Plug the power cable into a 230 V wall socket.
3. Ensure that the drain hose is placed as instructed.

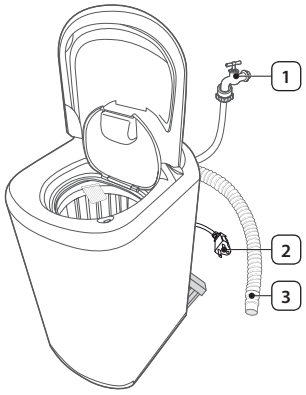

Washing for the first time

1. Place the laundry into the tub, add an appropriate amount of detergent, and then close the door. For effective washing, add detergent and bleach into the tub before adding the laundry.
2. Press the **POWER** button.
3. Press the **Baby care** or **Course** button to select a cycle.
4. Press the **Water Level** button to specify the water level according to the load of laundry and select the water supply type (cold or hot water).
   The default water level is set for each cycle, and the default water supply type is cold water.
5. Press the **Rinse** button to select the number of rinse cycle.
   (The number of rinse cycles cannot be changed during the last rinse cycle or the spin cycle.)
6. Press the **START/PAUSE** button.
7. Close the door.

- If the door stays open when the washing machine starts operating, the washing machine will stop the current operation for safety reasons. (However, the water supply will continue even though the door is opened)
- To change the wash cycle, press the **START/PAUSE** button, select a cycle and then press the **START/PAUSE** button again.
- If you want to add the soak cycle, press the **Soak** button before starting the wash. The Soak cycle is not available for courses: **Delicates**, **Quick Wash**, **Rinse+Spin**, **Spin**, or **Eco Tub Clean**.

Untitled-6 27 2014-11-26 5:02:10

Water level and temperature

For economic and effective washing, specify a proper water level and a water supply type.
The default water level is High, and the default supply type is cold water.

- Press the **Water Level** button to select a water level and a water supply type:
  High/Cold > High/Hot > Mid/Cold > Mid/Hot > Low/Cold > Low/Hot > High/Cold
- If you change the water level before the water fills up to the preset level, the washing time changes accordingly.

⚠ **CAUTION**: To prevent damage to clothing, check the Care label on the clothing.

Child Lock

Child Lock is designed to prevent children from accidents.

- Once the Child Lock is set, it remains set until you release it manually. Turning off the washing machine will not release this function.
- Press and hold the **START/PAUSE** button for more than 3 seconds to set or release the Child Lock. The Child Lock indicator turns on or off accordingly.

Mute

- When the washing machine enters the mute mode, the Mute indicator turns on.
- Press and hold both the **Water Level** and the **Soak** buttons to mute or unmute the washing machine.

Eco Tub Clean

It is advisable to clean the tub regularly for hygienic reasons.

1. Press the **POWER** button.
2. Press the **Course** button to select **Eco Tub Clean**.
3. Press the **Water Level** button. By default, the water level is fixed to Mid. You can select only hot or cold water.
4. Press the **START/PAUSE** button.

⚠ **CAUTION**: Do not use any cleaning agents for cleaning the drum. Chemical residues in the drum deteriorates the washing performance.

Untitled-6 28 2014-11-26 5:02:10

Maintainence

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

Cleaning the exterior

Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.

Use a soft cloth to dry the surfaces.

⚠ **CAUTION**: Do not pour water onto the washing machine.

Keeping the tub clean

When using the machine under humid conditions for an extended time, various airborne bacteria may stick to the tub and form mold. Keep the tub clean and sanitary at all times.

Auto Reminder

- The washing machine automatically reminds users of cleaning the tub at a certain interval. When the Auto Reminder turns on, remove laundry from the tub if any, and press the **Course** button to select **Eco Tub Clean**.
- The auto reminder indictor turns on for six consecutive times. However, you can safely ignore the reminder without affecting the performance of the washing machine.
- The auto reminder activates once every one or two months, depending on the tub conditions.
- The tub cleaning time may differ depending on the weather and the water temperature.

Untitled-6 29 2014-11-26 5:02:10

Cleaning the water valve mesh filter

1. Remove the filter and wash it thoroughly.

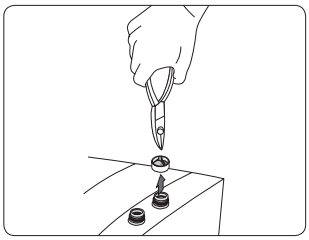

2. Return the filter to its place and securely connect the hose to the inlet water valve.
3. Check if there is any water leakage.
   Ensure that the water supply hose is connected tightly.

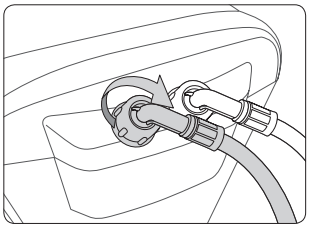

Untitled-6 30 2014-11-26 5:02:10

Filter

Filters can filter and collect debris and other materials while washing.

If no filters are installed, laundry could be contaminated by other materials. Please clean the filters periodically.

1. Lift the filter up to remove it as shown in the figure.

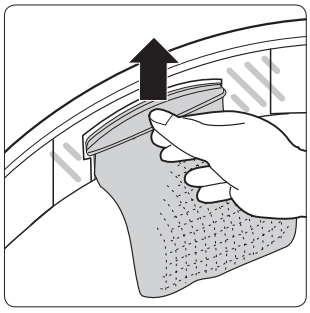

2. Turn the filter inside out to remove other materials.

- If the mesh of filter is clogged, the laundry could be contaminated.

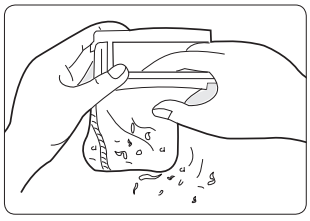

3. Thoroughly clean and rinse the filters with water.

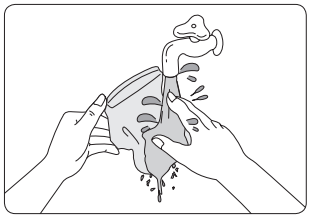

4. Insert the lower part of filter and push it according to the arrow direction as shown in the figure. When you hear a 'click' sound, it means the filter is in place.

- The filter is a consumable part. If damaged, please contact your local service center.

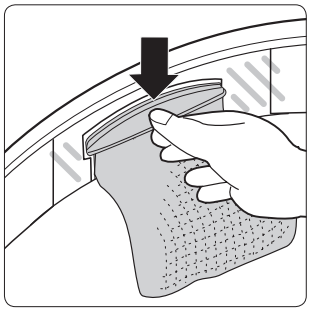

Untitled-6 31 2014-11-26 5:02:11

Troubleshooting

Check the table below for basic troubleshooting solutions

If you request service and the problem is not a malfunction, you will be charged for the service call, even if the washer is still under warranty.

Problem	Checkpoints	Action
Power does not turn on.	Check if the electric voltage is normal.	This product can only be used with 120 volt line.
	Check if the power cord is completely plugged in.	Plug in the power cord.
The washing machine does not operate.	Check if the door is closed.	Close the door.
	Check if the washing machine is in Paused.	Press Start/Pause button again and check if washing proceeds.
	Check if water has reached the preset water level.	If the water pressure is low, it takes a longer time.
	Check if the water tap is closed.	Open the tap.
	Check if the Child Lock is set.	No key works if the Child Lock is set. Release the Child Lock.
The drain hose and tub are frozen	• Apply hot water on the tap so you can disconnect the water supply hose, and then place the hose in hot water. • Pour warm water into the tub and wait about 10 minutes. • Cover the water hose connection with a hot, wet cloth. • When the water supply hose has defrosted, reconnect the hose and check if the water supply is normal.	
Water is not supplied.	Check if water is supplied after you press the Start/Pause button.	Water won't be supplied unless you press the Start/Pause button again. Press the Start/Pause button.
	Check if the water tap is closed.	Open the tap.
	Check if the water supply hose filter is blocked.	Clean the filter net using a toothbrush.
	Check if the water supply has been cut off.	If the water supply is cut off, close the water tap and turn off the washing machine.

Untitled-6 32 2014-11-26 5:02:11

Problem	Checkpoints	Action
Water leaks at the water supply hose connector.	If the water supply hose connector at the tap is loose, water can leak.	Repeat the assembling steps again. (Refer to "**Step 2 - Connect the water supply hose**" on page **10**)
	Check if the rubber ring in the water supply hose connector is in the right position.	Move it into the correct position.
	Check if the water supply hose is twisted.	Straighten the hose.
	If the water supply is too strong, water may leak.	Adjust the tap so less water flows into the supply hose.
	Check if the water is leaking is from the tap itself.	Fix the tap.
There are loud noises and vibrations when spinning.	Check if the laundry is spread out evenly in the washing machine.	Spread out the laundry evenly and start again.
	Check if the washing machine is balanced and on a sturdy, flat surface.	Ensure that the washing machine is leveled.
	Ensure that the washing machine is not surrounded by unnecessary items.	Move anything unnecessary away from the washing machine.

Untitled-6 33 2014-11-26 5:02:11

Information codes

If your washing machine malfunctions, it will display an error code on its display. If that occurs, check the table below and try the solution suggested before calling Customer Service.

Error	Solution
4E	If the supplied amount of water does not change for 4 minutes, or the correct amount of water is not supplied within 60 minutes, this error appears with a beep. • Ensure that the water tap is opened.
5E	If the water does not drain completely after 30 minutes, this error appears with a beep. • Ensure that the drain hose is placed correctly. • Ensure that the drain hose is not clogged.
CE	If the temperate of the drain water is so high that it could cause injury, this error appears with a beep for safety reasons. • Ensure that the cold water tap is opened. • Ensure that the cold water tap and the hot water tap are connected correctly.
dE	If the door is opened during an operation, this error appears with a beep. • In this case, close the door, and then resume operation.
UE	This error appears with a beep if a spin operation fails. • Ensure that the laundry is spread out evenly.
4E2	If the temperature of the supplied water is so high that it could damage the laundry, this error appears with a beep. • Ensure that the cold water tap and the hot water tap are connected correctly.
IE/tE1/HE/HE1/dE1/ dE2/LE/8E/OE	The washing machine is not working properly. Contact the nearest Samsung service center.

Untitled-6 34 2014-11-26 5:02:11

Specifications

Specifications

The manufacturer's name and/or his trademark		SAMSUNG		
Country of origin		Made In Korea		
The type number		WB25H7000G*		
Kind of washing machine		Automatic electric Washing machine		
Washing system		Washing machine with vortex system		
Rated voltage (volts)		230 V ~		
Rated frequency (Hz)		60 Hz		
Rated power Input (watt or kW)	Rated power input	2200 W		
	Wash heater	1970 W		
	Main motor	215 W		
	Pump motor	80 W		
Water level		H	M	L
Washing capacity		2.5 kg	1.5 kg	0.7 kg
Quantity of water		27 ℓ	23 ℓ	18 ℓ
Washing machine class		Class I		
IP number		IPX4		
The maximum permissible inlet water pressure		780 kPa		
The minimum permissible inlet water pressure		50 kPa		
Standard quantity of water (litre)		50 ℓ		
Net weight		28 kg		
Spin revolutions		900 rpm		

- The washing machine shall not be installed at a humid place.
- The wringer must be switched off when not in use.
- The washing machine must not be operated by children.
- The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.
- The hands shall not be inserted into running water extracting tub.
- The washing machine whose lid can be opened during water extraction, that if it takes 15 s or more for complete stop of water-extracting chamber tub such a case should be understood as a trouble.

The energy label specifications have been determined by using the following program according to SASO 2692 and SASO 2693.

- The program is Energy saving, Water level-High, Water temp-Hot.

Untitled-6 35 2014-11-26 5:02:11

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)

DC68-03469A-01

WB25H7****

الغسالة

دليل المستخدم

Planet First 100% Recycled Paper

تم إنتاج هذا الدليل باستخدام ورق معاد تدويره بنسبة ١٠٠ ٪.

إمكانات هائلة

نشكرك على شراء هذا المنتج من Samsung.

SAMSUNG

DC68-03469A-01

Untitled-7 1 2014-11-26 5:02:43

المحتويات

معلومات السلامة ٣

الرموز والعلامات المستخدمة في هذا الدليل ٣
إرشادات السلامة الهامة ٥
متطلبات الموقع ٦

التركيب ٧

المحتويات ٧
متطلبات التركيب ٨
التركيب خطوة بخطوة ٩

العمليات الأساسية ٢٠

إرشادات الغسيل ٢٠
أنواع المساحيق واستخدامها ٢٣
متى يُضاف منعم الأقمشة ٢٣
التعامل مع الباب المحكم ٢٣
نبذة عن عملية الغسل المعقم ٢٤
بدء العمل ٢٥

الصيانة ٢٩

تنظيف الأسطح الخارجية ٢٩
الحفاظ على الحوض نظيفًا ٢٩
تنظيف المصفاة الشبكية المتصلة بصمام دخول الماء ٣٠
المصفاة ٣١

استكشاف المشكلات وإصلاحها ٣٢

ارجع إلى الجدول أدناه للتعرف على حلول استكشاف المشكلات وإصلاحها الأساسية ٣٢
رموز المعلومات ٣٤

المواصفات ٣٥

المواصفات ٣٥

Untitled-7 2 2014-11-26 5:02:43

معلومات السلامة

ستلاحظ وجود علامات تحذيرية وتنبيهية في هذا الدليل. لا تغطي التحذيرات والتنبيهات وإرشادات الأمان الهامة التالية كافة الأحوال والمواقف المحتمل التعرض لها. تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط. يُعد استخدام المنتج لأغراض تجارية سوء استخدام له.

وفي هذه الحالة، لا يشمل الضمان الأساسي الذي تقدمه شركة Samsung المنتج. كما لا تتحمل شركة Samsung أية مسؤولية عن الأعطال أو الخسائر الناجمة عن سوء الاستخدام. وتقع على عاتقك مسؤولية التعامل بحذر والانتباه عند تركيب الغسالة وصيانتها وتشغيلها. لا تتحمل شركة Samsung أي مسؤولية تجاه الأضرار الناجمة عن سوء الاستخدام.

وبعد قراءة هذا الدليل، احتفظ به في مكان آمن للرجوع إليه في المستقبل.

الرموز والعلامات المستخدمة في هذا الدليل

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

لذا، يُرجى اتباعها بعناية.

⚠	**تحذير:** الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى **التعرض إلى إصابات جسدية خطيرة و/أو الموت و/أو حدوث تلف بالممتلكات.**
⚠	**تنبيه:** الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى **التعرض إلى إصابات جسدية و/أو حدوث تلف بالممتلكات.**
✎	**ملاحظة:**

اقرأ جميع الإرشادات أولًا قبل استخدام الجهاز.

يوجد احتمال للتعرض لمخاطر، كما هو الحال مع أي أجهزة تستخدم الطاقة الكهربائية والأجزاء المتحركة. ولتشغيل هذا الجهاز بأمان، يجب عليك التعرّف على طريقة تشغيله وتوخي الحذر أثناء استخدامه.

Untitled-7 3 2014-11-26 5:02:43

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون داخل الغسالة أو فوقها. حيث إنه لا يمكن فتح باب الغسالة بسهولة من الداخل. وقد يصاب الأطفال بإصابات بالغة الخطورة في حالة احتباسهم بداخلها.

يجب عدم استخدام هذا الجهاز من قبل ذوي الإعاقات البدنية أو الحسية أو العقلية أو من تنقصهم المعرفة والخبرة (بما في ذلك الأطفال)، إلا إذا كانوا تحت إشراف شخص يوفر لهم إرشادات استخدام الجهاز ويكون مسؤولًا عن سلامتهم.

تجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

بالنسبة للاستخدام في أوروبا: يمكن أن يستخدم هذا الجهاز الأطفال الذين تبدأ أعمارهم من ٨ سنوات فأكثر، بالإضافة إلى الأشخاص الذين يعانون من ضعف في قدراتهم العضلية أو الحسية أو العقلية أو أولئك الذين تنقصهم المعرّفة والخبرة إذا كانوا تحت الإشراف وعلى دراية بالإرشادات التي تتعلق باستخدام الجهاز بطريقة آمنة وفهم المخاطر المتضمنة في عملية الاستخدام. ويجب عدم السماح للأطفال باللعب بالجهاز، كما يجب عدم السماح للأطفال بالتنظيف أو الصيانة التي يقوم بها المستخدم دون إشراف.

في حالة تلف سلك التيار الكهربائي، يجب تغييره من قبل الشركة المصنِّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.

يجب وضع الجهاز بحيث يسهل الوصول إلى قابس التيار الكهربائي وصنابير التزويد بالماء وأنابيب صرف الماء.

بالنسبة للأجهزة التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.

يجب استخدام مجموعة الخرطوم المرفقة بالغسالة ولا تعيد استخدام مجموعة الخرطوم القديمة.

تنبيه: لتجنب حدوث خطر بسبب إعادة الضبط غير المقصود للقاطع الحراري، يجب ألا يتم تزويد هذا الجهاز بالطاقة من خلال جهاز فصل ووصل خارجي -مثل المؤقت- أو توصيله بدائرة كهربائية يتم تشغيلها وإيقاف تشغيلها بصورة منتظمة بواسطة مرفق الخدمة العامة.

Untitled-7 4 2014-11-26 5:02:43

إرشادات السلامة الهامة

⚠ تحذير: لأسباب تتعلق بالسلامة، اقرأ الإرشادات التالية قبل تركيب الغسالة أو استخدامها.

لا تحاول إصلاح الغسالة أو فكّ أجزائها أو تعديلها. لطلب أي عمليات إصلاح، اتصل بأقرب مركز خدمة Samsung.

يجب عدم غسل العناصر الملوثة بالجازولين أو الكيروسين أو البنزين أو المذيبات أو أي مواد أخرى قابلة للاشتعال.

لا تقم بتركيب الغسالة في موقع معرّض لدرجات حرارة عالية جدًا و/أو مستويات رطوبة عالية و/أو عوامل الطقس الأخرى.

لا تدع الأطفال أو الحيوانات الأليفة يلعبون فوق الغسالة أو بداخلها. حيث يلزم دومًا توفير المراقبة الملائمة.

لا تستخدم الغسالة في حالة تعرض الغسالة أو أي جزء بها للتلف.

احتفظ بجميع مواد التعبئة والتغليف بعيدًا عن متناول الأطفال.

لا تضع يدك أو أي شيء أسفل الغسالة أو داخلها أثناء تشغيلها.

لا تستبدل سلك تيار كهربائي أو قابس تيار كهربائي تالف بنفسك. ولكن اطلب من شركة Samsung أو فني صيانة مؤهل استبدال سلك تيار كهربائي أو قابس تيار كهربائي تالف.

قبل بدء استخدام الغسالة، قم بإزالة الغطاء.

Untitled-7 5 2014-11-26 5:02:43

متطلبات الموقع

لضمان أمان وسلامة تركيب الغسالة واستخدامها، اتّبع الإرشادات التالية التي تتعلق بتحديد موقع ملائم للغسالة.

تحذير:

- انتبه عند رفع الغسالة أو تحريكها.
- لا تقم بتركيب الغسالة في مناطق معرّضة لعوامل الطقس.
- لا تقم بتركيب الغسالة في مناطق تنخفض بها درجة الحرارة المحيطة إلى أقل من ٣٢ درجة فهرنهايت (٠ درجة مئوية).
- احتفظ بالغسالة بعيدًا عن الأجهزة الكهربائية.
- لا تقم بتركيب الغسالة في موقع به تسرب للغاز.
- لا تقم بتركيب الغسالة بالقرب من سخان أو أي مواد قابلة للاشتعال.

حدد سطحًا مستويًا تم إنشاؤه جيدًا بدون سجاد أو غطاء أرضية قد يعيق التهوية أو يساعد على حدوث الاهتزازات.

حدد موقعًا يسهل الوصول من خلاله إلى مأخذ أرضي بثلاث فتحات.

لتوصيل خراطيم الماء المتوفرة بالغسالة، تأكد من أن صنابير الماء على بُعد ١٢٠ سم (٤ أقدام) من الجزء الخلفي للغسالة.

Untitled-7 6 2014-11-26 5:02:43

التركيب

اتّبع هذه الإرشادات بعناية لضمان عمل الغسالة الجديدة بشكل جيد. ولتجنب حدوث أي إصابات جسدية.

المحتويات

أخرج الغسالة بعناية من صندوقها وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء استلامها أو إذا لم تصلك جميع الأجزاء، فاتصل بخدمة عملاء Samsung المحلية أو بائع التجزئة التابع لشركة Samsung.

١	غطاء الباب
٢	غطاء الباب الآمن
٣	المصفاة
٤	حوض الغسل
٥	أرجل توازن
٦	خرطوم الماء البارد
٧	خرطوم الماء الساخن (الطُرز التي ينطبق عليها هذا فقط)
٨	خرطوم الصرف
٩	سلك التيار الكهربائي
١٠	لوح الصد

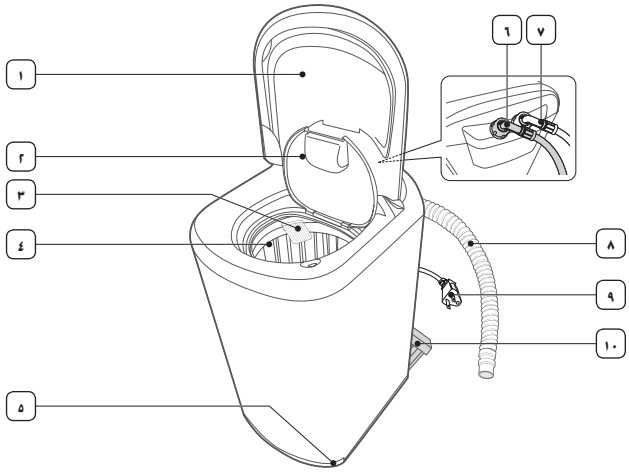

يُستخدم هذا المنتج فقط مع مصدر تيار كهربائي بقدرة ٢٣٠ فولط. ولا يتوافق مع مصدر تيار كهربائي بقدرة ١١٠ فولط.

الملحقات

يمكن شراء وصلة خرطوم التزويد بالماء وخرطوم الصرف (امتداد للخرطوم) من مركز خدمة Samsung محلي.

خرطوم التزويد بالماء (٢)

خرطوم الصرف

دليل الخرطوم


محوّل الصرف

مشبك


لوح الصد


جهاز ضبط التوازن

مسمار قلاووظ


دليل المستخدم

محوّل إدخال على شكل حرف T

Untitled-7 7
2014-11-26 5:02:44

متطلبات التركيب

التزويد بالماء

- يتم ملء الغسالة بضغط ماء من ٠,٠٥ ميجاباسكال إلى ٠,٧٨ ميجاباسكال (٠,٥~٨,٠ كجم•ث/سم٢).
- قد يؤدي ملء الغسالة بمستوى ضغط ماء أقل من ٠,٠٥ ميجاباسكال (٠,٥ كجم•ث/سم٢) إلى عدم غلق صمام الماء تمامًا. أو قد تستغرق الغسالة وقتاً أطول من الوقت الطبيعي في عملية الملء مما يسبب إيقاف تشغيل الغسالة. (تتضمن الغسالة نظام تحديد وقت الملء والذي تم تصميمه للحد من عمليات التدفق في حالة ارتخاء الخرطوم الداخلي.)
- لتوصيل خراطيم الماء المتوفرة بالغسالة. تأكد من أن صنابير الماء على بُعد ١٢٠ سم (٤ أقدام) من الجانب الخلفي للغسالة.
- قبل استخدام الغسالة لأول مرة. افحص جميع الوصلات عند صمام دخول الماء والصنابير بحثاً عن أي تسريب.

للحد من خطر تسريب الماء:

- تأكد من سهولة الوصول إلى صنابير الماء.
- أغلق صنابير الماء عندما لا تستخدم الغسالة.
- افحص بحثاً عن أي تسريب للماء عند وصلات خرطوم دخول الماء.

مصدر التيار الكهربائي

- لتفادي خطر حدوث حريق أو التعرض لصدمة كهربائية أو إصابة جسدية. يجب أن تتم عملية توصيل الأسلاك والتوصيل الأرضي وفقًا لأحدث نسخة من المواصفات القياسية الكهربائية الأمريكية ANSI/FNPA. رقم ٧٠ والقوانين والضوابط المحلية. يتحمل المالك مسؤولية توفير مصدر طاقة كهربائية مناسبة لهذا المنتج.
- لا تستخدم سلك توصيل.
- لا تستخدم إلا سلك التيار الكهربائي المرفق بالغسالة لتشغيلها.
- عند الإعداد لعملية التركيب. تأكد أن مصدر التيار الكهربائي يتوفر فيه:
  - منصهر أو قاطع دائرة كهربائية
  - دائرة كهربائية فرعية منفصلة لتشغيل الغسالة فقط
- يجب توصيل الغسالة بمأخذ أرضي بشكل صحيح. لمنع حدوث أي خلل أو عطل بالغسالة. يعمل التأريض السليم على الحد من مخاطر التعرض لصدمة كهربائية من خلال توفير الحد الأدنى لمقاومة التيار الكهربائي.
- يتم تزويد الغسالة بسلك تيار كهربائي به قابس أرضي بثلاثة محاور لاستخدامه في مأخذ أرضي تم تركيبه بشكل صحيح.
- لا تقم بتوصيل السلك الأرضي بماسورة بلاستيكية أو خط غاز أو ماسورة ماء ساخن.
- قد يتسبب التوصيل غير الصحيح للموصل الأرضي في حدوث صدمة كهربائية. استشر فني كهرباء مؤهل أو فني صيانة ما إذا تم توصيل الغسالة بموصل أرضي بشكل صحيح أم لا.
- لا تقم بتعديل القابس المرفق مع الغسالة. وفي حالة عدم توافقه مع المأخذ. فاستعن بفني كهرباء مؤهل لتركيب مأخذ مناسب.

Untitled-7 8 2014-11-26 5:02:45

التوصيل الأرضي

من أجل سلامتك، يجب توصيل الغسالة بمأخذ أرضي.

- تأكد من توصيل الغسالة بطرف أرضي توصيلًا صحيحًا لمنع التعرض لصدمة كهربائية.

في حالة وجود طرف أرضي في مأخذ الحائط،

فلا يلزم توفير وصلات أرضية إضافية.

(*): طرف أرضي

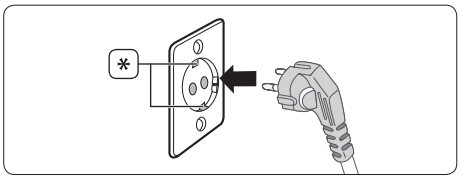

التركيب خطوة بخطوة

الخطوة الأولى - تحديد موقع

متطلبات الموقع:

- على سطح مستوٍ بدون سجاد أو غطاء أرضية.
- اترك مسافة تصل إلى ١٠ سم (٤ بوصة) على الأقل بين الغسالة والحائط.
- يجب ألا يكون معرّضًا لضوء الشمس المباشر أو للمطر حيث أن الرطوبة قد تؤدي إلى حدوث تلف في العزل الكهربائي مما يتسبب في التعرض لخطر صدمة كهربائية.
- يلزم أن يكون به تهوية كافية.
- لا يكون معرّضًا لدرجات حرارة أقل من ٣٢ فهرنهايت أو ٠ درجة مئوية.
- يكون بعيدًا عن مصادر الحرارة.
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك التيار الكهربائي.

Untitled-7 9 2014-11-26 5:02:45

الخطوة الثانية - توصيل خرطوم التزويد بالماء

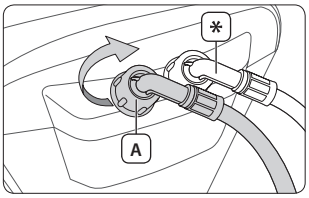

١. قم بتوصيل مثبّت الذراع الذي يكون على شكل حرف L لتوصيل خرطوم التزويد بالماء البارد بمدخل التزويد بالماء البارد الموجود في اللوحة الخلفية العلوية للغسالة. بعد ذلك، اربطه من خلال تدوير **الجزء (A)** في اتجّاه عقارب الساعة بيديك.

(*): الطُرز التي ينطبق فيها هذا فقط

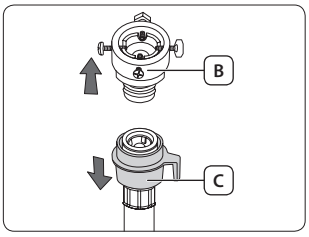

٢. افصل **المحول (B)** عن الطرف الآخر **لخرطوم التزويد بالماء (C)**.

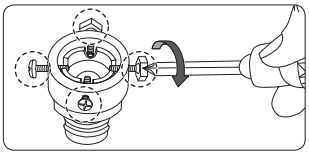

٣. قم فك المسامير الأربعة الموجودة بالمحوّل باستخدام مفك براغي من نوع Philips.

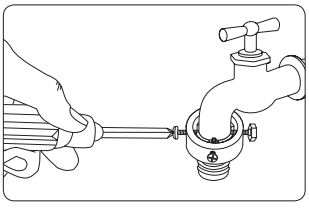

٤. قم بتوصيل المحوّل بصنبور الماء عن طريق ربط جميع المسامير القلاووظ بإحكام أثناء رفع المحوّل لأعلى.

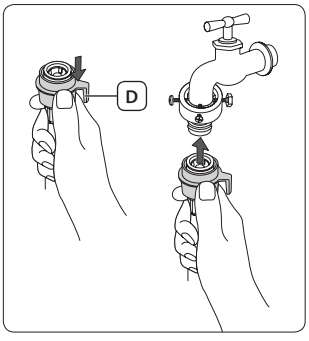

٥. وصّل خرطوم التزويد بالماء بالمحوّل. في حالة إدخال **الجزء (D)** في المحوّل، فيتم توصيل الخرطوم تلقائيًا بالمحوّل مع سماع صوت طقطقة.

بعد توصيل الخرطوم التزويد بالماء بالمحوّل، تأكد من توصيله بشكل صحيح من خلال جذب خرطوم التزويد بالماء لأسفل.

تحذير: تأكد من عدم ثني خرطوم توريد الماء أو التوائه. في حالة ثني الخرطوم أو التوائه، فقد يتسرب الماء مما يؤدي إلى التعرض لصدمة كهربائية. إذا لزم الأمر، فيمكنك فك التواء خرطوم التزويد بالماء بالغسالة من خلال إرخاء مثبّت الذراع الذي يكون على شكل حرف L وتدوير الخرطوم وإعادة ربطه بإحكام.

Untitled-7 10 2014-11-26 5:02:45

٦. افتح مصدر صنبور الماء وتأكد من عدم وجود تسريب من مدخل التزويد بالماء أو صنبور الماء أو المحوّل. وإذا واجهت مشكلة في حدوث تسري للماء، فكرر الخطوات السابقة.

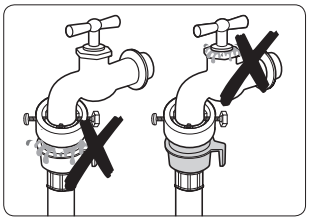

تحذير: في حالة حدوث تسرب للماء، فتوقف عن استخدام الغسالة. وإلا، فقد ينتج عن ذلك التعرض لصدمة كهربائية.

إذا كان صنبور الماء من النوع القلاووظ، فقم بتوصيل خرطوم التزويد بالماء بالصنبور كما هو موضح.

استخدم صنبورًا من النوع التقليدي للتزويد بالماء. إذا كان الصنبور مربعًا أو كبيرًا جدًا، فأزل الحلقة الفاصلة قبل إدخال المحوّل في الصنبور.

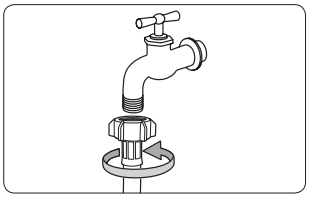

توصيل خرطوم التزويد بالماء الساخن (الطُرز التي ينطبق فيها هذا فقط)

١. قم بتوصيل مثبّت الذراع الذي يكون على شكل حرف ⊣ لتوصيل خرطوم التزويد بالماء الساخن بمدخل التزويد بالماء الساخن الموجود في اللوحة الخلفية العلوية للغسالة. بعد ذلك، اربطه من خلال تدوير **الجزء (A)** يدويًا في اتجاه عقارب الساعة.

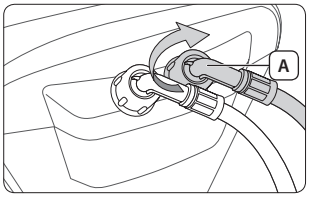

٢. قم بتوصيل الطرف الآخر لخرطوم التزويد بالماء الساخن بصنبور الماء الساخن بالطريقة نفسها التي تقوم من خلالها بتوصيل خرطوم التزويد بالماء البارد.

لاستخدام الماء البارد فقط، استخدم خرطومًا على شكل حرف ٧.

Untitled-7 11 2014-11-26 5:02:45

الدمج مع غسالة أخرى من خلال استخدام صنبور ماء واحد

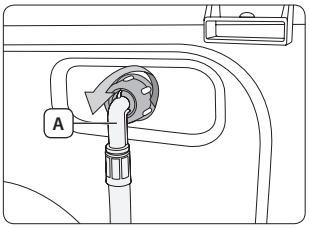

١. افصل **خرطوم التزويد بالماء (A)** عن الغسالة الأخرى.

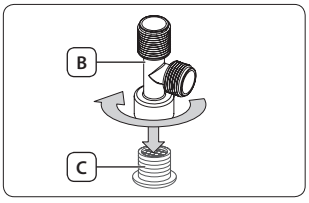

٢. قم بتوصيل **بمحول الإدخال على شكل حرف T (B) بفتحة المدخل (C)** في الغسالة الأخرى.

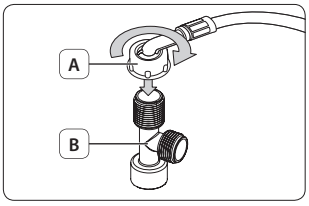

٣. قم بتوصيل **خرطوم التزويد بالماء (A)** الذي تم فصله **بمحول الإدخال على شكل حرف T (B)**.

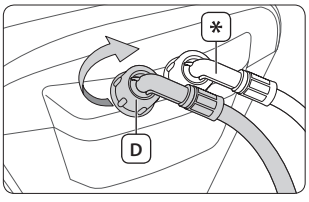

٤. قم بتوصيل **خرطوم التزويد بالماء (D)** في الغسالة ذات ميزة التعقيم بفتحة الإدخال في الغسالة ذات ميزة التعقيم.

(*): الطُرز التي ينطبق فيها هذا فقط

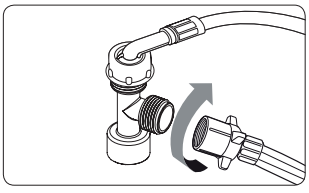

٥. قم بتوصيل خرطوم التزويد بالماء بمحوّل الإدخال على شكل حرف T كما هو موضح. ثم تدويره في اتجاه عقارب الساعة لربطه. ومن ثمّ يصدر صوت طقطقة.

(*): حلقة مطاطية

لتجنب حدوث تسرب الماء، تأكد من تأمين الحلقة المطاطية حول المحوّل على شكل حرف T.

تنبيه: عند الانتهاء من دورة الغسيل، أغلق صنبور الماء. وإلا، يتسبب ذلك فيما يلي:

- في حالة عدم إغلاق صنبور الماء أو عدم توصيلها بشكل صحيح، فقد يحدث تسريب للماء خاصةً في فصل الشتاء.
- أما في حالة عدم إغلاق صنبور الماء، فقد يتجمد الماء المتدفق داخل خرطوم الماء.
- قد ينفجر صنبور الماء أو الخرطوم عند وضعه في درجة حرارة منخفضة.

Untitled-7 12 2014-11-26 5:02:46

الخطوة الثالثة - توصيل خرطوم الصرف

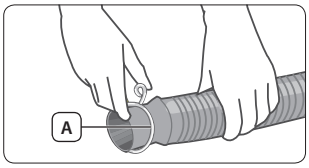

١. أدخل **حلقة الوصل (A)** حول خرطوم الصرف.

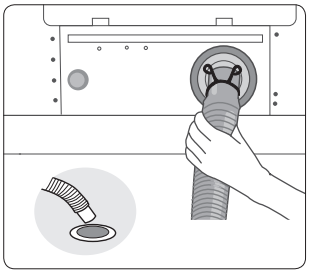

٢. قم بتوصيل أحد طرفي خرطوم الصرف في فتحة الصرف، ثم قم بتوصيل الطرف الآخر لخرطوم الصرف بمخرج الصرف الخاص بالغسالة.

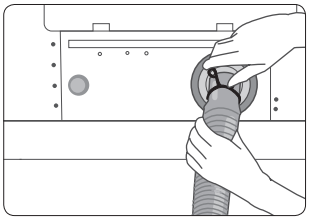

٣. اربط خرطوم الصرف من خلال إدخال حلقة الوصل في مخرج الصرف. يمكن التحكم في ضبط طول خرطوم الصرف بحيث يمكنك إطالته حسب الحاجة.

ضخ نظام الصرف (الطُرز التي ينطبق فيها هذا فقط)

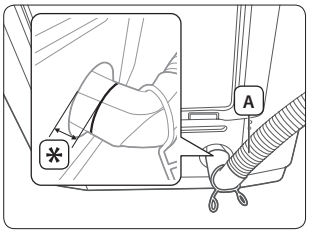

١. قم بتوصيل **خرطوم الصرف (A)** بأنبوب مخرج المضخة المزوّد بخرطوم مائل بزاوية ستين درجة.

يكون خرطوم الصرف أعلى أنبوب مخرج المضخة. تأكد من أنك قمت بتوصيل خرطوم الصرف بحيث يكون أقل من ثلثي (١٠ سم) من الأنبوب مكشوفًا.

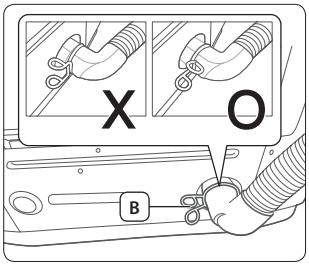

٢. اربط خرطوم الصرف بإحكام باستخدام **حلقة الوصل (B)**.

تأكد من أنه تم ربط حلقة الوصل بإحكام في المحورين المواجهين للغسالة.

Untitled-7 13 2014-11-26 5:02:47

٣. أدخل **المشبك (C)** في نهاية طرف قطعة الإسفنج.
تأكد من أن المشبك يشمل أحد طرفي قطعة الإسفنج.
تأكد من توصيل قطعة الإسفنج بإحكام. قد تتسبب قطعة الإسفنج غير المربوطة بإحكام في إحداث ضوضاء أثناء تشغيل الغسالة.

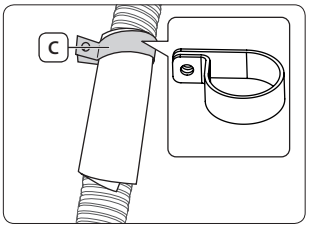

٤. أدخل المسمار المضمّن في فتحة المسمار الموجودة في المشبك. ثم قم بتثبيت المسمار في الفتحة الموجودة بالجانب الخلفي الأيمن للإطار. واربطه بإحكام باستخدام مفك براغي.

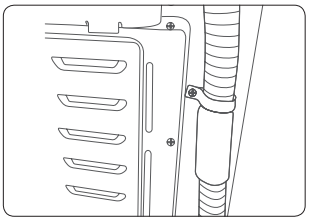

٥. تأكد من ربط خرطوم الصرف بإحكام كما هو موضح.

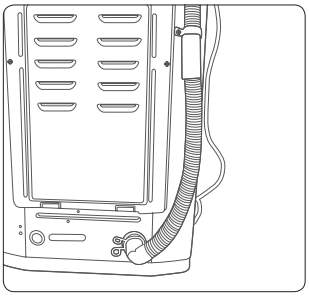

٦. ضع خرطوم الصرف الذي يتراوح طوله بين **٦٠ سم – ٩٠ سم (*)** على الأرض كما هو موضح. تأكد من أن طرف خرطوم الصرف لا يغمره الماء.

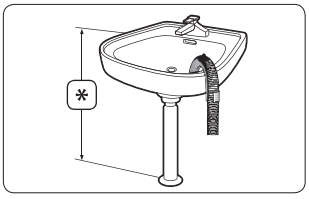

⚠ **تنبيه**: بمجرد ربط المسمار بإحكام في المشبك، لا تقم بفكه. وإلا، فقد يتسرب الماء أثناء تشغيل الغسالة.

Untitled-7 14 2014-11-26 5:02:47

وضع خرطوم الصرف في الاتجاه المعاكس (ينطبق فقط على الطُرز التي لا تتضمن مضخة)

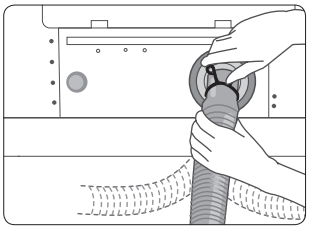

أثناء الضغط على حلقة الوصل لأسفل، افصل خرطوم الصرف. ضع خرطوم الصرف في الاتجاه المعاكس، ثم اتّبع الخطوات المذكورة أعلاه لتوصيله مرة أخرى.

إرشادات يجب مراعاتها في خرطوم الصرف

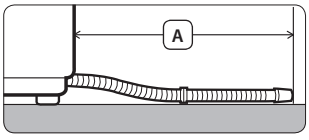

- عند تمديد خرطوم الصرف من خلال توصيل خرطوم آخر، لا يمكن أن يتجاوز إجمالي طوله **٣ م (A)**.

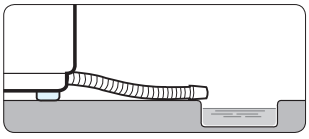

- للحصول على صرف ملائم للماء، تأكد من أن مستوى خرطوم الصرف أقل من مستوى الماء.

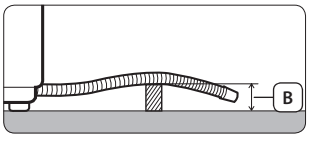

- تأكد من إدخال خرطوم الصرف في فتحة الصرف بسهولة دون وجود أي عوائق يزيد طولها عن **٥ سم (B)** أثناء إدخاله.

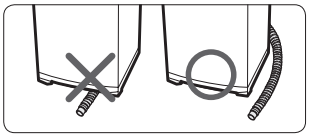

- لا تقم بتمرير خرطوم الصرف في أسفل الغسالة.

Untitled-7 15 2014-11-26 5:02:47

مشاركة فتحة الصرف مع غسالة أخرى (ينطبق فقط على الطُرز التي لا تتضمن مضخة)

لمشاركة فتحة صرف مع غسالة أخرى، استخدم محوّل الصرف على شكل حرف T.

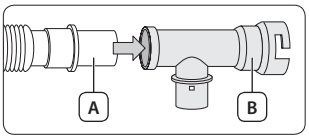

١. قم بتوصيل **خرطوم الصرف (A)** في الغسالة ذات ميزة التعقيم بأحد طرفي **محول الصرف على شكل حرف T (B)**.

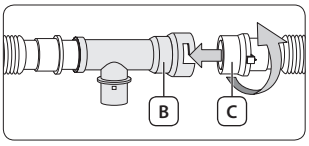

٢. أدخل **خرطوم الصرف (C)** الخاص بالغسالة الأخرى في **محول الصرف (D)**.

بالنسبة للغسالة الأوتوماتيكية بالكامل، الرجاء تخطي الخطوتين الثانية والثالثة، وانتقل مباشرةً إلى الخطوة الرابعة.

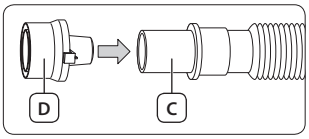

٣. استخدم أربطة الكبل لإحكام ربط الوصلة إذا كانت غير محكمة الربط.

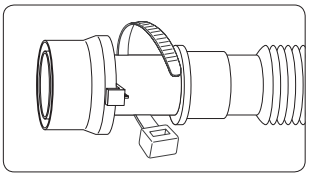

٤. اربط **خرطوم الصرف (C)** في الغسالة الأخرى **بمحول الصرف على شكل حرف T (B)**.

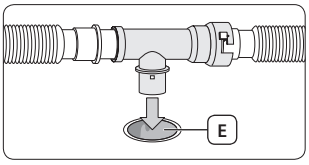

٥. أدخل محوّل الصرف على شكل حرف T في **فتحة الصرف (E)** كما هو موضح بالصورة.

تنبيه

- إذا لم يدخل محوّل الصرف على شكل حرف T كليًا في فتحة الصرف، قد يترسب الماء حول فتحة الصرف.
- تأكد من أن محوّل الصرف على شكل حرف T يملأ فتحة الصرف تمامًا.

Untitled-7 16 2014-11-26 5:02:48

مشاركة فتحة صرف مع غسالة أخرى (ينطبق فقط في حالة الطرازات التي تحتوي على مضخة)

لمشاركة فتحة صرف مع غسالة أخرى، استخدم محوّل الصرف على شكل حرف T.

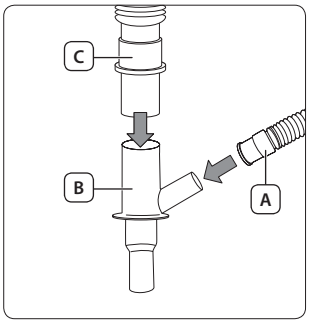

١. اربط **خرطوم الصرف (A)** في الغسالة ذات ميزة التعقيم **بمحول الصرف (B)** كما هو موضح بالصورة.

٢. أدخل **خرطوم الصرف (C)** بالغسالة الأخرى في **محول الصرف (B)** كما هو موضح بالصورة.

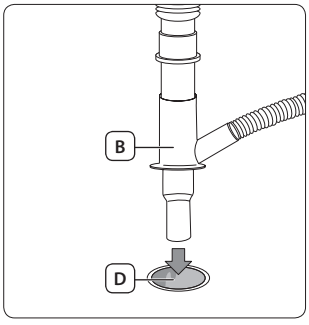

٣. أدخل محوّل الصرف في **فتحة الصرف (D)** كما هو موضح بالصورة.

تنبيه

- إذا لم يدخل محوّل الصرف كليًا في فتحة الصرف، قد تترسب الماء حول فتحة الصرف.
- تأكد من أن محوّل الصرف يملأ فتحة الصرف تمامًا.

Untitled-7 17 2014-11-26 5:02:48

الخطوة الرابعة - توازن الغسالة

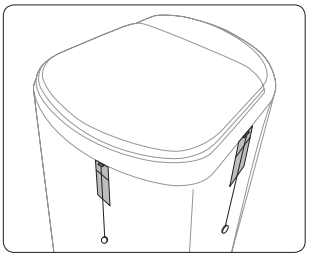

١. اختر موقعًا يبعد عن الحائطين الخلفي والجانبي بما لا يقل عن ٤ بوصة (١٠ سم).
٢. ضع جهازي ضبط التوازن المرفقين مع الغسالة في الجزء الأمامي والجانبي على التوالي. ثم تحقق مما إذا كانت الغسالة في مستوى مضبوط أم لا.

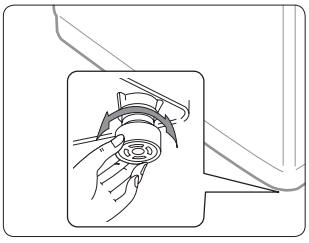

٣. إذا لم تكن الغسالة في وضع مستوٍ، فاضبط أرجل التوازن.
٤. وللتحقق مما إذا كانت الغسالة ثابتة، اضغط على زاويتي أحد أقطار الغسالة. فإذا اهتزت الغسالة، فاضبط أرجل التوازن.

Untitled-7 18 2014-11-26 5:02:48

الخطوة الخامسة – تركيب لوح الصد

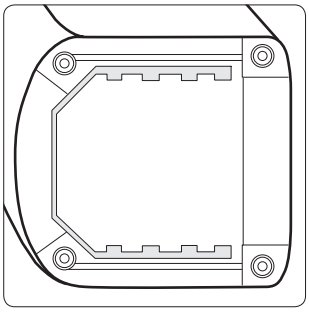

١. قم بإمالة الغسالة إلى أسفل على أحد جانبيها.
- ولا تقم بإمالة الغسالة إلى أسفل على الجزء الأمامي أو الخلفي.
- وأثناء إمالة الغسالة إلى أسفل، احرص على عدم تعرض سطح الغسالة للخدش.

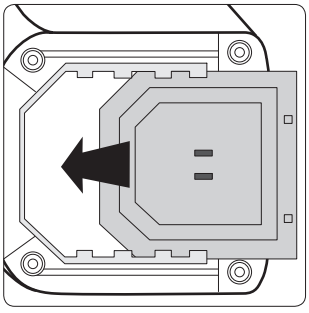

٢. قم بتركيب لوح الصد بأسفل الغسالة بمحاذاة الخط التوجيهي.
- يساعد لوح الصد على تقليل الضوضاء الصادرة أثناء تشغيل الغسالة.
- وبعد تركيب لوح الصد، لا تقم بإزالته إلا في حالة الضرورة.

تحذير: لا تلمس أسفل الغسالة سواء بيدك أو بأشياء معدنية أثناء تشغيل الغسالة، حيث قد يؤدي هذا إلى حدوث إصابة جسدية أو صدمة كهربائية.

بعد إكمال التركيب، قم بتشغيل الدورة دوران+شطف للتأكد من أن الغسالة تعمل بشكل جيد.

Untitled-7 19 2014-11-26 5:02:49

العمليات الأساسية

إرشادات الغسيل

اقرأ الإرشادات التالية بعناية لتجنب حدوث أية مشكلة بالغسالة أو تلف للملابس.

راجع ملصق العناية الموجود بالملابس قبل غسلها.

- لا تتجاوز في ملء الحوض بالغسيل، حيث يؤدي التحميل الزائد للغسيل إلى تقليل كفاءة عملية الغسل وبضر بشدة بالملابس. بالإضافة إلى أن الغسالة قد تتسبب في ثني أو تجعيد الملابس.
- عند القيام بغسل أشياء كبيرة الحجم أو ضخمة أو أشياء صغيرة الحجم وقليلة لا تملأ الحوض تماماً (على سبيل المثال، بطانية أو وسادة أو دمي محشوة أو جاكت واحد أو اثنين)، فأضف بعض المناشف لتحسين أداء التدوير.
- تحقق من وجود أي عناصر قد يتغير لونها. ضع منظفًا سائلاً على منشفة بيضاء وقطعة ملابس وحك الاثنين ببعضهما بقوة. تحقق من عدم تلطخ ألوان أي من القطعتين بالأخرى.
- تعامل بحذر مع الوشاحات والملابس المستوردة؛ حيث إنها تفقد لونها بسهولة. تحقق من عدم وجود بقع أو أوساخ. في حالة وجود بقع، أضف بعض من المسحوق إلى الملابس، وادعكها في اتجاه واحد. يؤدي دعك الأوساخ والأتربة المتراكمة على الملابس الرقيقة إلى تعريضها للتلف.
- وبالنسبة للغسيل المتسخ بشدة، قم أولًا بإزالة الأتربة منه، ثم غسله.
- قبل الغسل، احرص على إجراء معالجة أولية للأساور والياقات وثنيات الفساتين والجيوب بالتنظيف بفرشاة عليها مسحوق. يجب التعامل مع الأقمشة المصنوعة من الصوف والمعالجة ضد التجعيد بشكل خاص، وذلك عن طريق ربطها معاً (باستخدام خيوط) قبل عملية الغسل. أزل الخيوط بعد تجفيف الملابس.
- قد تتسبب المعادن الموجودة بالملابس في تلف الحوض وغيرها من الغسيل. اقلب الملابس التي بها أزرار أو الملابس المطرّزة قبل غسلها. أغلق جميع السحابات. وإلا، قد يؤدي ذلك إلى تلف حاوية التجفيف.
- يمكن أن تتشابك الملابس ذات الخيوط الطويلة مع غيرها من الملابس. احرص على تثبيت الخيوط قبل بدء الغسل.
- اقلب الملابس الناعمة قبل غسلها.
- اغسل الملابس السوداء والمناشف القطنية كل على حدة. قد تصبح المناشف ملطخة في حالة غسلها مع الملابس السوداء.
- يجب ألا تطفو الستائر أو الملابس الخفيفة أو الجينز. في حالة طفوها، أوقف الغسالة بالضغط على الزر **بدء/إيقاف** والضغط على الملابس لأسفل حتى يتم غمرها في الماء. إذا استمر طفو الملابس خلال عملية الغسل، فقد يتلف كل من الغسيل والغسالة.

⚠ **تنبيه**

- افحص كافة الجيوب قبل الغسل.
- قد يؤدي وجود دبابيس الشعر والعملات إلى تلف الغسالة.
- افحص جميع الجيوب لاحتمال وجود قطع معدنية بها، وأخرجها قبل الغسل.

Untitled-7 20 2014-11-26 5:02:49

لا تغسل

- الملابس التي تفقد شكلها بسهولة حتى عند نقعها في الماء فقط.
- أربطة العنق والصدريات والسترات والبذلات والمعاطف المصنوع معظمها من الريون وغيرها من مشتقات الألياف المختلطة التي يمكن أن تفقد شكلها بسهولة (كأن تنكمش أو تتلطخ ألوانها).
- يمكن أن تتغير ألوان الأقمشة المعالجة ضد التجعيد أو المنقوشة أو المعالجة بالراتنج التي تفقد شكلها بسهولة حتى عند نقعها في الماء.
- المنتجات التي تتلطخ ألوانها بسهولة والمصنوعة من القطن والصوف والحرير المجعد والمنتجات الجلدية والأدوات الجلدية والملابس المزينة بالجلد وملحقاتها.
- لا تغسل الملابس المقاومة للماء (مثل، ملابس التزحلق على الجليد وحفاضات الأطفال والممسحات/السجاجيد). قد يؤدي ذلك إلى خروج الغسيل أو اهتزاز الغسالة بشكل غير طبيعي، مسببًا إصابة شخصية أو تلف الغسالة أو الأرضية أو الملابس. عند دوران الحوض، قد يبقى الماء داخل الملابس أو الأقمشة المقاومة للماء، وقد يتجمع في أحد الأركان مسببًا اهتزاز الغسالة بشكل غير طبيعي. وقد يرتفع الغسيل ويخرج من الغسالة، مما يؤدي إلى التعرض لإصابات جسدية.

شبكة الغسيل

- استخدم شبكات الغسيل التجارية فقط.
- ضع الملابس الخفيفة في شبكة غسيل.
- قد يتسبب غسل الملابس الكشمير والملابس ذات الأحجام الكبيرة والأوزان الخفيفة (مثل، الملابس المزينة بالدانتيل والملابس النسائية والجوارب المصنوعة من النيلون والألياف الاصطناعية، وما إلى ذلك) في ارتفاعها إلى أعلى الغسالة وإلحاق الضرر بالملابس والغسالة. استخدم شبكة الغسيل، أو اغسل قطع الملابس هذه على حدة.
- ضع الملابس ذات الخيوط الطويلة والمزينة بالدانتيل وملاءات السرير والملابس الصوفية في شبكة غسيل قبل غسلها.

Untitled-7 21 2014-11-26 5:02:49

قائمة الفحص

الفرز والمعالجة الأولية

١. افرز الغسيل وفقًا لأنواعه وألوانه ودرجات اتساخه (مثل غسيل شديد الاتساخ أو لن تتلطخ ألوانه أو قماشه رقيق أو ما إلى ذلك).
٢. ضع ملحقات الملابس في مكانها المخصص لها، وفرّغ الجيوب.
٣. إذا كان بالملابس أي تلف، فالرجاء إصلاح ذلك قبل غسلها.
٤. تحقق من أن الأزرار مثبتة في مكانها بإحكام.
٥. قبل الغسل، قم بإجراء معالجة أولية لأي بقع صعبة.
٦. إذا تعلقت أي قطعة غسيل بغطاء الباب، فقد يؤدي ذلك إلى تمزقها وتسرب الماء. تأكد قبل غلق الباب أن الغسيل غير عالق به.

قبل إجراء دورة الغسل المعقم

قم بفرز الغسيل وغسله حسب لونه.

- لا تقم بغسل الملابس التي قد تتلطخ ألوانها في دورة الغسل المعقم.
- لا تستخدم دورة الغسل المعقم مع الملابس الرقيقة مثل، الملابس الصوفية والملابس النسائية.

لا تستخدم دورة الغسل بالغلي مع قطع الملابس التالية

الأقطان	القمصان التي تتلطخ ألوانها بسهولة. القمصان المطرزة والألياف المتماسكة
الألياف الكتانية	الملابس المقاومة للتجعيد ذات الألياف المختلطة الاصطناعية
الملابس الصوفية أو الحريرية	غير مسموح سوى بعملية غسل بالماء البارد.
الألياف الاصطناعية	الملابس العلوية، القمصان، الجوارب
الألياف الاصطناعية أو ألياف أسيتات السيليلوز	لا تستخدم دورة الغسل المعقم.

⚠
- الرجاء استخدام مأخذ حائط بتيار متردد جهده ٢٣٠ فولط وشدته ١٣أمبير أو أكثر.
- لا تستخدم سلك توصيل.
- قد ينتج عن استخدام جهد أو تيار كهربائي آخر نشوب حريق أو حدوث صدمة كهربائية أو انقطاع التيار.
- لا تستخدم هذا المنتج مع جهاز تسخين آخر في نفس الوقت.
- تختلف درجة حرارة دورة الغسل المعقم وفقًا للبيئة.

Untitled-7 22 2014-11-26 5:02:49

أنواع المساحيق واستخدامها

- لا يتحسن الأداء بإضافة كمية زائدة من المسحوق. وبجانب ذلك، ستتسبب الكمية الزائدة من المسحوق في وجود فقاعات كثيرة جدًا، مما ينتج عنه انخفاض تأثير دورة الشطف وتلوث البيئة.
- قد تظل بقايا المسحوق البودرة على الغسيل الذي تم تنظيفه، وسينتج عن ذلك وجود روائح كريهة به. إذا كنت تستخدم مسحوق بودرة، فاشطف الغسيل جيدًا.
- المبيض قلوي قوي، ويمكن أن يتسبب في تلف الغسيل.
- لا تستخدم منظفًا من النوع الصابوني سواء أكان صلبًا أم بودرة؛ حيث إن استخدام أنواع المسحوق هذه قد يتسبب فيما يلي:
  - وجود بقايا المسحوق البيضاء على الغسيل الذي تم تنظيفه.
  - قد تتكتل كمية معينة من المسحوق، وسيتسبب ذلك في انبعاث روائح كريهة من الغسيل أو تلطخ ألوانه.
  - يمكن أن يتلوث الحوض كثيرًا بسبب بقايا المسحوق؛ ومن ثمّ، سيتلوث الغسيل.

تختلف كمية منعم الأقمشة الخاص بالصوف أو ملابس الأطفال وفقًا للشركة المصنعة لمنعم الأقمشة. تأكد من استخدام كمية المنعم القياسية أو الموصى بها من الشركة المصنعة.

متى يُضاف منعم الأقمشة

- يصدر التنبيه صوتًا لمدة ٢٠ ثانية قبل تشغيل آخر دورة شطف مباشرة لتذكير المستخدمين بإضافة منعم الأقمشة إلى الحوض.
- بالنسبة لدورة **دوران+شطف**، يجب أن يضاف منعم الأقمشة مسبقًا.

التعامل مع الباب المحكم

افتح الباب المحكم

ارفع المقبض برفق لكي تفتح الباب.

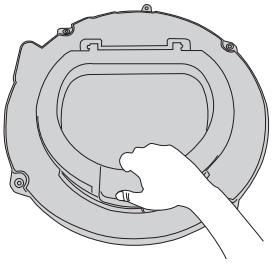

أغلق الباب المحكم

قم بخفض مستوى الباب حتى يلامس المغناطيس المضمّن.

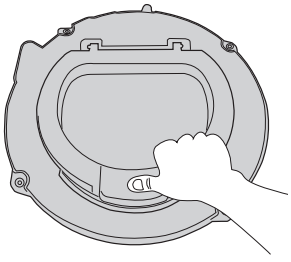

إذا لم يتم غلق الباب المحكم جيدًا، فقد تنبعث أصوات من الغسالة أثناء دورة العصر، أو قد يخرج البخار أثناء تعقيم الغسيل. أغلق الباب المحكم جيدًا وثبّته في مكانه المناسب.

Untitled-7 23 2014-11-26 5:02:49

نبذة عن عملية الغسل المعقم

بالنسبة للغسيل المراد وضعه في دورة الغسل المعقم بالمنزل، فعادةً ما يجب غسله جيدًا قبل إدخاله في تلك الدورة. وسيساعد ذلك في إزالة البقع.

كيف يمكن لدورة الغسل المعقم أن تزيل البقع بطريقة أكثر فعالية؟

أثناء تعقيم الملابس، يتم طي ألياف الغسيل وعادة ما تحتك ببعضها لإزالة البقع الصعبة بسهولة. كما تساعد درجة الحرارة المرتفعة على تنعيم أقمشة الغسيل وتحسين أداء المسحوق. وخلال ذلك، سيكون من السهل إزالة البقع الموجودة على سطح الغسيل بسبب البخار والفقاعات التي تتكون بسبب درجة الحرارة المرتفعة لدورة الغسل المعقم.

التعقيم

تعمل دورة الغسل المعقم على تعقيم الملابس. يمكن من خلال هذه الدورة إزالة الروائح الكريهة ومعظم البكتريا التي تتسبب في حساسية البشرة. اجعل ملابسك منعشة ونظيفة.

التبييض

تصبح ألوان الملابس أكثر سطوعًا بسبب إزالة البقع الصعبة خلال دورة الغسل المعقم.

تأثير الغسل

كلما ارتفعت درجة حرارة الماء، تحسنت نتيجة الغسل.

ولدورة الغسل المعقم تأثير أفضل من دورة الغسل العادي بنسبة ٦٠٪. حتى مع وضع نصف كمية المسحوق العادية، يرتفع أداء دورة الغسل المعقم بما يصل إلى ٢٠٪.

إرشادات دورة الغسل المعقم

- كن حذرًا أثناء استخدام دورة الغسل المعقم لأن درجة الحرارة مرتفعة جدًا.
- لصرف الماء بأمان، لا تحدد مستوى ماء عالٍ لدورة الغسل المعقم. وبوجه خاص، لا تضع كمية غسيل يتجاوز وزنها ١,٥ كجم (٣ رطل) في الحوض. إذا تم وضع كمية غسيل يتجاوز وزنها ١,٥ كجم (٣ رطل)، فقد تتلف ألياف الملابس. (الملابس الداخلية: ١٣٠ جم؛ بنطلونات قصيرة: ٥٠ جم؛ جوارب: ٥٠ جم؛ المنشفة العادية: ١٥٠ جم؛ منشفة الحمام: ٣٠٠ جم)
- لا تقم بتمرير ماء ساخن في صمام الماء البارد. لا تقم بتشغيل الغسالة إلا بعد غلق صمام الماء البارد. لأسباب تتعلق بالسلامة، أضف ماءً باردًا لتبريد الماء الساخن أثناء الصرف.
- يعتمد الوقت اللازم لتشغيل دورة الغسل المعقم على درجة حرارة الماء. فكلما انخفضت درجة حرارة الماء، ازداد الوقت المستغرق حتى تكتمل الدورة.
- تم تصميم الغسالة خصيصًا للقيام بعملية الغسل المعقم. أضف ماءً باردًا فقط إلى الاء الساخن لتبريده عند اكتمال الدورة.
- إذا تم وضع ماء ساخن فقط أو كانت خراطيم الماء متصلة بالعكس، فلن تقوم الغسالة بصرف الماء. وإذا حدث ذلك بالفعل، فسيصدر صوت تنبيه وتظهر رسالة خطأ.
- لا تبدأ دورة الغسل المعقم إلا إذا كان الباب مغلقًا.
- وبمجرد بدء الدورة، لا يمكن تغيير مستوى الماء أو إضافة ماء ساخن.

Untitled-7 24 2014-11-26 5:02:49

بدء العمل

لوحة التحكم

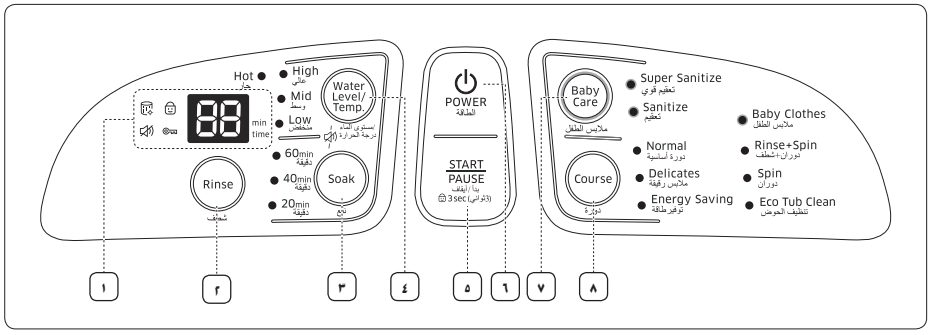

١. **اللوحة**

عرض وقت الغسل المتبقي.

عرض رسالة خطأ في حالة حدوث مشكلة.

٢. **شطف**

اضغط على هذا الزر لإجراء دورة الشطف فقط أو لتغيير عدد دورات الشطف.

يمكنك إعداد ما يصل إلى ٦ دورات شطف.

٣. **نقع**

اضغط على هذا الزر لتشغيل دورة الغسل بالنقع.

ووفقًا للدورة المحددة، يتم تحديد وقت النقع بالدقائق.

٤. **مستوى الماء**

اضغط على هذا الزر لتحديد مستوى الماء من عالٍ ومتوسط ومنخفض.

٥. **بدء/إيقاف**

اضغط على هذا الزر لبدء التشغيل أو إيقافه.

لتغيير الدورة أثناء تشغيل الغسالة، اضغط على هذا الزر لإيقاف تشغيلها.

بعدها، غيّر الدورة، واضغط على الزر مرة أخرى.

٦. **الطاقة**

اضغط على هذا الزر مرة واحدة لتشغيل الغسالة.

اضغط عليه مرة أخرى لإيقاف تشغيل الغسالة.

Untitled-7 25 2014-11-26 5:02:49

٧. ملابس الطفل

استخدم هذه الدورة في غسل ملابس الأطفال والملابس الداخلية التي تتطلب دورات شطف إضافية لأغراض صحية دون تلف أقمشتها.

تعقيم قوي	لتعقيم الملابس الداخلية وتبييضها. يتم رفع درجة حرارة الغسيل حتى تصل إلى مستوى التعقيم، ويتم حفظه لمدة زمنية محددة مسبقًا، ثم يمر بثلاث دورات للشطف. (كمية الغسيل المسموح بها: ١,٥ كجم)
تعقيم	لتعقيم الغسيل أثناء تشغيل وضع توفير الطاقة. (كمية الغسيل المسموح بها: ١,٥ كجم)
ملابس الطفل	مخصصة لملابس الأطفال حديثي الولادة (بما في ذلك، الحفاضات) وملابس الصغار والملابس العضوية التي تحتاج إلى نظافة فائقة دون تلف الأقمشة. (كمية الغسيل المسموح بها: ١,٥ كجم)

٨. دورة

حدد دورة مناسبة لنوع الغسيل.

يعتمد نوع الدوران وسرعة العصر على نوع الدورة المحددة.

دورة أساسية	الدورة الافتراضية.
ملابس رقيقة	لغسل الملابس الرقيقة مثل الملابس النسائية والداخلية.
توفير طاقة	استخدم هذه الدورة لتوفير الطاقة.
دوران•شطف	للملابس التي تحتاج إلى الشطف فقط سواء بإضافة منعم الأقمشة أم لا.
دوران	حدد هذه الدورة لتشغيل دورة العصر فقط. يمكنك ضبط وقت العصر من ١ إلى ٩ دقائق. يختلف وقت العصر وفقًا لوقت الغسل المتبقي. لاحظ أن وقت الغسل المتبقي يتضمن وقت العصر الفعلي ووقت الصرف.
تنظيف الحوض	تعمل هذه الدورة على تنظيف الحوض وتعقيمه.

Untitled-7 26 2014-11-26 5:02:49

قبل أن تبدأ

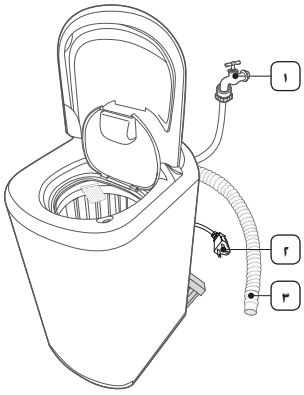

١. افتح صنبور الماء.
تحقق من توصيل خراطيم توريد الماء بالصنبور المطلوب بصورة صحيحة (ماء بارد/ساخن).
٢. وصل كبل التيار الكهربائي بمأخذ حائط جهده ٢٣٠ فولط.
٣. تأكد من وضع خرطوم الصرف في مكانه حسب الإرشادات.

الغسل للمرة الأولى

١. ضع الغسيل في الحوض، وأضف كمية مناسبة من المسحوق. ثم أغلق الباب. للحصول على عملية غسل رائعة، أضف المسحوق والمبيض في الحوض قبل إضافة الغسيل.
٢. اضغط على الزر **الطاقة**.
٣. اضغط على الزر **ملابس الطفل** أو **دورة** لتحديد دورة.
٤. اضغط على الزر **مستوى الماء** لتحديد مستوى الماء وفقًا لكمية الغسيل وتحديد نوع توريد الماء (بارد أو ساخن).
يتم إعداد مستوى الماء الافتراضي لكل دورة، ويكون نوع توريد الماء الافتراضي هو الماء البارد.
٥. اضغط على الزر **شطف** لتحديد عدد دورات الشطف.
(لا يمكن تغيير عدد دورات الشطف خلال آخر دورة شطف أو دورة العصر.)
٦. اضغط على الزر **بدء/إيقاف**.
٧. أغلق الباب.

- إذا ظل الباب مفتوحًا عند بدء تشغيل الغسالة، فسيتوقف تشغيل الغسالة الحالي لأسباب تتعلق بالسلامة. (ومع ذلك، سيستمر توريد الماء حتى أثناء فتح الغطاء.)
- لتغيير دورة الغسل، اضغط على الزر **بدء/إيقاف**، وحدد دورة، ثم اضغط على الزر **بدء/إيقاف** مرة أخرى.
- إذا كنت تريد إضافة دورة النقع، فاضغط على الزر **نقع** قبل بدء الغسل. لا تتوفر دورة النقع للدورات التالية: **ملابس رقيقة** أو **الغسل السريع** أو **دوران+شطف** أو **دوران** أو **تنظيف الحوض**.

Untitled-7 27 2014-11-26 5:02:50

مستوى الماء ودرجة الحرارة

للحصول على عملية غسل اقتصادية ورائعة، حدد مستوى الماء المناسب ونوع توريد الماء.

يتم ضبط مستوى الماء الافتراضي على عالٍ، ويكون نوع توريد الماء الافتراضي هو الماء البارد.

- اضغط على الزر **مستوى الماء** لتحديد مستوى الماء ونوع توريد الماء:

عالٍ/بارد > عالٍ/ساخن > متوسط/بارد > متوسط/ساخن > منخفض/بارد > منخفض/ساخن > عالٍ/بارد

- إذا قمت بتغيير مستوى الماء قبل وصول الماء إلى المستوى الذي تم ضبطه مسبقًا، فسيتغير وقت الغسل وفقًا لذلك.

⚠ **تنبيه**: لمنع تلف الملابس، افحص بطاقة العناية الموجودة على الملابس.

التأمين ضد عبث الأطفال

تم تصميم الوظيفة "التأمين ضد عبيث الأطفال" خصيصًا لمنع تعرض الأطفال لحوادث.

- وبمجرد ضبط هذه الوظيفة، تظل كذلك حتى يتم تحريرها يدويًا. لا يعمل إيقاف تشغيل الغسالة على تحرير هذه الوظيفة.
- اضغط مع الاستمرار على الزر **بدء/إيقاف** لمدة تزيد عن ثلاث ثوان لضبط "التأمين ضد عبث الأطفال" أو لتحريرها. يتم تشغيل مؤشر "التأمين ضد عبث الأطفال" أو إيقاف تشغيله وفقًا لذلك.

كتم

- عند دخول الغسالة في الوضع "كتم"، يتم تشغيل مؤشر "كتم".
- اضغط مع الاستمرار على الزرين **مستوى الماء** و**نقع** لكتم صوت الغسالة أو لإلغاء كتم صوتها.

تنظيف الحوض

يُنصح بتنظيف الحوض بانتظام لأسباب تتعلق بالصحة.

١. اضغط على الزر **الطاقة**.

٢. اضغط على الزر **دورة** لتحديد **تنظيف الحوض**.

٣. اضغط على الزر **مستوى الماء**. بشكل افتراضي، يتم تثبيت مستوى الماء عند "متوسط". لا يمكنك تحديد سوى ماء ساخن أو بارد.

٤. اضغط على الزر **بدء/إيقاف**.

⚠ **تنبيه**: لا تستخدم أي مواد لتنظيف الحوض. تؤدي بقايا المواد الكيميائية الموجودة في الحاوية إلى تدهور مستوى الغسل.

Untitled-7 28 2014-11-26 5:02:50

الصيانة

يؤدي حفظ الغسالة نظيفة إلى تحسين أدائها وتجنب الإصلاحات غير الضرورية وزيادة عمرها.

تنظيف الأسطح الخارجية

امسح الأسطح الخارجية للغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.

استخدم قطعة من القماش الناعم لتجفيف الأسطح.

⚠ **تنبيه:** لا تصب الماء على الغسالة.

الحفاظ على الحوض نظيفًا

عند استخدام الغسالة في الأجواء الرطبة لفترة طويلة، قد تلتصق البكتريا بالحوض وتكون رواسب. حافظ على نظافة الحوض وتعقيمه طوال الوقت.

تذكير تلقائي

- تقوم الغسالة بتذكير المستخدمين تلقائيًا بتنظيف الحوض خلال فاصل زمني معين. عند تشغيل التذكير التلقائي، قم بإزالة الغسيل من الحوض في حالة وجوده، ثم اضغط على الزر **دورة** لتحديد **تنظيف الحوض**.
- يتم تشغيل مؤشر التذكير التلقائي خلال ست فترات زمنية متتالية. مع هذا، يمكنك تجاهل التذكير بشكل آمن دون التأثير على أداء الغسالة.
- يتم تنشيط التذكير التلقائي مرة كل شهر أو شهرين، وذلك حسب حالة الحوض.
- قد يختلف وقت تنظيف الحوض حسب الطقس ودرجة حرارة الماء.

Untitled-7 29 2014-11-26 5:02:50

تنظيف المصفاة الشبكية المتصلة بصمام دخول الماء

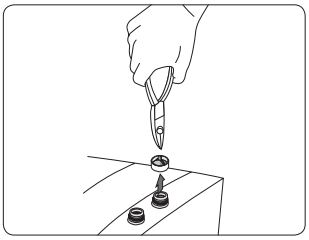

١. قم بإزالة المصفاة وغسلها جيدًا.

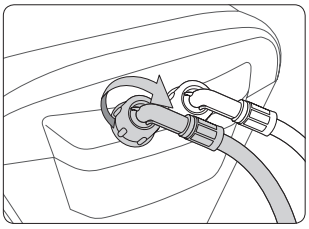

٢. أعد المصفاة إلى مكانها، ووصّل الخرطوم بأمان بصمام دخول الماء.
٣. تحقق مما إذا كانت هناك ارتشاحات.
تأكد من أن خرطوم توريد الماء غير متجمد.

Untitled-7 30 2014-11-26 5:02:50

المصفاة

يمكن للمصفاة جمع المخلفات وتصفيتها أثناء الغسل.

قد يتلوث الغسيل بسبب المواد الأخرى في حالة عدم تركيب أي مصفاة. الرجاء تنظيف المصفاة بصورة دورية.

١. ارفع المصفاة لأعلى لإزالتها كما هو موضح في الشكل.

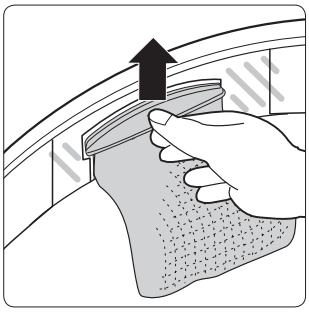

٢. اقلب المصفاة من الداخل للخارج لإزالة المواد الأخرى.

- قد يتلوث الغسيل إذا كانت شبكة المصفاة مسدودة.

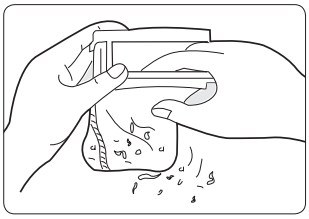

٣. نظّف المصفاة واشطفها بالماء جيدًا.

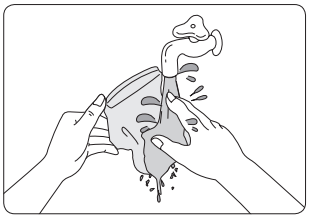

٤. أدخل الجزء السفلي من المصفاة وادفعه وفقًا لاتجاه السهم كما هو موضح في الشكل. عندما تسمع صوت "نقرة"، فذلك يعني أن المصفاة في مكانها.

- تُعد المصفاة من الأجزاء الاستهلاكية. الرجاء الاتصال بمركز الخدمة لديك في حالة تلفه.

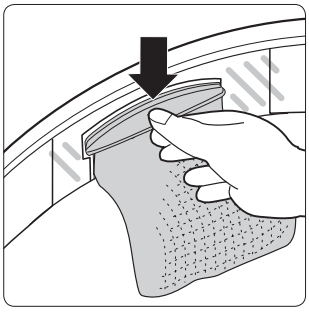

Untitled-7 31 2014-11-26 5:02:50

استكشاف المشكلات وإصلاحها

ارجع إلى الجدول أدناه للتعرف على حلول استكشاف المشكلات وإصلاحها الأساسية.

إذا طلبت الصيانة ولم تكن المشكلة عطلاً، فستتم مطالبتك بدفع رسوم طلب خدمة الصيانة حتى إذا كانت الغسالة في فترة الضمان.

المشكلة	نقاط الفحص	الإجراء
زر الطاقة لا يعمل	تحقق من أن جهد التيار الكهربائي عادي.	لا يمكن استخدام هذا المنتج إلا مع خط ذي جهد كهربائي قدره ١٢٠ فولط.
	تحقق من أن سلك التيار الكهربائي موصّل جيدًا.	وصّل سلك التيار الكهربائي.
غسالة الملابس لا تعمل.	تحقق من إغلاق الباب.	أغلق الباب.
	تحقق مما إذا كانت الغسالة في وضع الإيقاف المؤقت.	اضغط على الزر بدء/إيقاف مؤقت مرة أخرى. وتحقق من متابعة عملية الغسل.
	تحقق من وصول الماء إلى مستوى الماء الذي تم ضبطه مسبقًا.	إذا كان ضغط الماء منخفضًا، فستستغرق العملية وقتًا أطول.
	تحقق مما إذا كان صنبور الماء مغلقًا.	افتح الصنبور.
	تأكد من ضبط "التأمين ضد عبث الأطفال".	لا يمكن القيام بعمليات أساسية في حالة ضبط "التأمين ضد عبث الأطفال". حرّر زر "التأمين ضد عبث الأطفال".
خرطوم الصرف والحوض متجمدان.	• استخدم الماء الساخن مع الصنبور حتى تتمكن من فصل خرطوم توريد الماء، ثم ضع الخرطوم في الماء الساخن. • صب ماءً دافئًا في الحوض واتركه لمدة ١٠ دقائق. • قم بتغطية وصلة خرطوم الماء بقطعة قماش مبللة بماء ساخن. • عند فك تجميد خرطوم توريد الماء، أعد توصيل الخرطوم وتحقق من أن عملية توريد الماء طبيعية.	
لا يتم توريد الماء.	تحقق من توريد الماء بعد قيامك بالضغط على الزر بدء/إيقاف.	لن يتم توريد الماء إلا بعد قيامك بالضغط على الزر بدء/إيقاف مرة أخرى. اضغط على الزر بدء/إيقاف.
	تحقق مما إذا كان صنبور الماء مغلقًا.	افتح الصنبور.
	تحقق مما إذا كانت مصفاة خرطوم توريد الماء مسدودة.	نظّف شبكة المصفاة بفرشاة أسنان.
	تحقق مما إذا كان خرطوم توريد الماء مقطوعًا.	في حالة قطع خرطوم توريد الماء، أغلق صنبور الماء وأوقف تشغيل الغسالة.

Untitled-7 32 2014-11-26 5:02:51

المشكلة	نقاط الفحص	الإجراء
يتسرب الماء من وصلة خرطوم توريد الماء.	يمكن أن يتسرب الماء في حالة عدم تركيب وصلة خرطوم توريد الماء بالحنفية بإحكام.	كرر خطوات التركيب مرة أخرى. ارجع إلى "**الخطوة الثانية - توصيل خرطوم التزويد بالماء**" في صفحة ١٠)
	تحقق مما إذا كانت حلقة المطاط الموجودة في وصلة خرطوم توريد الماء في وضعها الصحيح.	قم بتحريكها إلى الموضع الصحيح.
	تحقق من أن خرطوم توريد الماء غير ملتوٍ.	وقم بفك التواء الخرطوم.
	إذا كانت عملية توريد الماء قوية جداً، قد يحدث تسرب للماء.	اضبط الصنبور بحيث يتدفق قدر أقل من الماء في خرطوم توريد الماء.
	تحقق من عدم تسرب الماء من الصنبور نفسه.	أصلح الصنبور.
تصدر ضوضاء عالية واهتزازات أثناء عملية العصر.	تحقق مما إذا كان قد تم توزيع الغسيل بالتساوي في الغسالة.	قم بتوزيع الغسيل بالتساوي. وابدأ تشغيل الغسالة مرة أخرى.
	تحقق من أن الغسالة متوازنة وعلى أرض ثابتة ومسطحة.	تأكد من وجود الغسالة على سطح مستوٍ.
	تأكد من عدم إحاطة الغسالة بأشياء غير ضرورية.	أبعد تلك الأشياء غير الضرورية عن الغسالة.

Untitled-7 33 2014-11-26 5:02:51

رموز المعلومات

يظهر رمز خطأ على اللوحة في حالة تعرض الغسالة لأعطال. في حالة حدوث ذلك، الرجاء التحقق من الجدول أدناه ومحاولة تنفيذ الحلول المقترحة قبل طلب خدمة العملاء.

الخطأ	الحل
4E	في حالة عدم تغير كمية الماء التي يتم توريدها لمدة ٤ دقائق أو في حالة عدم توريد كمية الماء المناسبة خلال ١٠ دقيقة، فسيظهر هذا الخطأ مع صوت تنبيه. • تأكد من أن صنبور الماء مفتوح.
5E	في حالة عدم صرف الماء تمامًا بعد ٣٠ ثانية، فسيظهر هذا الخطأ مع صوت تنبيه. • تأكد من وضع خرطوم الصرف بشكل صحيح. • تأكد من عدم انسداد خرطوم الصرف.
CE	إذا كانت درجة حرارة ماء الصرف مرتفعة للغاية بدرجة قد تتسبب في حدوث إصابة، فسيظهر هذا الخطأ مع تنبيه لأسباب تتعلق بالسلامة. • تأكد من أن صنبور الماء البارد مفتوح. • تأكد من توصيل صنبوري الماء البارد والساخن بشكل صحيح.
dE	إذا كان الباب مفتوحًا أثناء التشغيل، فسيظهر هذا الخطأ مع تنبيه. • في هذه الحالة، أغلق الباب واستأنف التشغيل.
UE	يظهر هذا الخطأ مع صوت تنبيه في حالة فشل استكمال عملية العصر. • تحقق من توزيع الغسيل بالتساوي.
4E2	إذا كانت درجة حرارة الماء التي يتم توريدها مرتفعة للغاية بدرجة قد تتسبب في تلف الغسيل، فسيظهر هذا الخطأ مع تنبيه. • تأكد من توصيل صنبوري الماء البارد والساخن بشكل صحيح.
IE/tE1/HE/HE1/dE1/dE2/ LE/8E/OE	الغسالة لا تعمل بشكل سليم. اتصل بأقرب مركز خدمة Samsung.

Untitled-7 34 2014-11-26 5:02:51

المواصفات

المواصفات

اسم الشركة المصنعة و/أو علامتها التجارية		SAMSUNG		
بلد المنشأ		صُنع في كوريا		
رقم النوع		WB25H7000G*		
نوع الغسالة		غسالة كهربائية أوتوماتيكية		
نظام الغسيل		غسالة بنظام دوراني		
الجهد المقدر (بالفولت)		٢٣٠ فولت		
التردد المقدر (بالهرتز)		٦٠ هرتز		
مدخل الطاقة المقدر (بالواط أو كيلوواط)	مدخل الطاقة المقدر	٢٢٠٠ واط		
	سخان الغسل	١٩٧٠ واط		
	المحرك الرئيسي	٢١٥ واط		
	محرك المضخة	٨٠ واط		
مستوى الماء		عالٍ	متوسط	منخفض
سعة الغسيل		٢,٥ كجم	١,٥ كجم	٠,٧ كجم
كمية الماء		٢٧ لتر	٢٣ لتر	١٨ لتر
فئة الغسالة		الفئة I		
رقم IP		IPX4		
الحد الأقصى لضغط الماء المسموح به		٧٨٠ كيلوباسكال		
الحد الأدنى لضغط الماء المسموح به		٥٠ كيلوباسكال		
كمية الماء القياسية (باللتر)		٥٠ لتر		
الوزن الصافي		٢٨ كجم		
عدد دورات العصر		٩٠٠ دورة في الدقيقة		

- يجب ألا يتم تركيب الغسالة في مكان رطب.
- يجب إيقاف تشغيل العصارة في حالة عدم استخدامها.
- يجب ألا يقوم الأطفال بتشغيل الغسالة.
- قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تتعلق بتحسين المنتج.
- يجب ألا تدخل يديك في حوض استخراج الماء الجاري.
- في حالة استغراق الغسالة، التي يتم فتح غطاؤها أثناء عملية استخراج الماء، ١٥ ثانية أو أكثر لكي يتوقف حوض حجيرة استخراج الماء تمامًا، فمعنى ذلك أن الغسالة بها مشكلة.

تم تحديد مواصفات ملصق الطاقة باستخدام البرنامج الآتي وفقًا للمعيارين SASO 2692 و SASO 2693.

- البرنامج موفر للطاقة ويمكن من خلاله التزويد بمستوى عالٍ من الماء، بالإضافة إلى التزويد بالماء الساخن.

Untitled-7 35 2014-11-26 5:02:51

SAMSUNG

هل لديك أي أسئلة أو تعليقات؟

البلد	اتصل	أو قم بزيارة موقعنا على الإنترنت
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)

DC68-03469A-01